


# Axial piston variable pump A10VGT

Series 11

**Instruction manual**  
**RE 92770-01-B/11.2016**

Replaces: --  
English

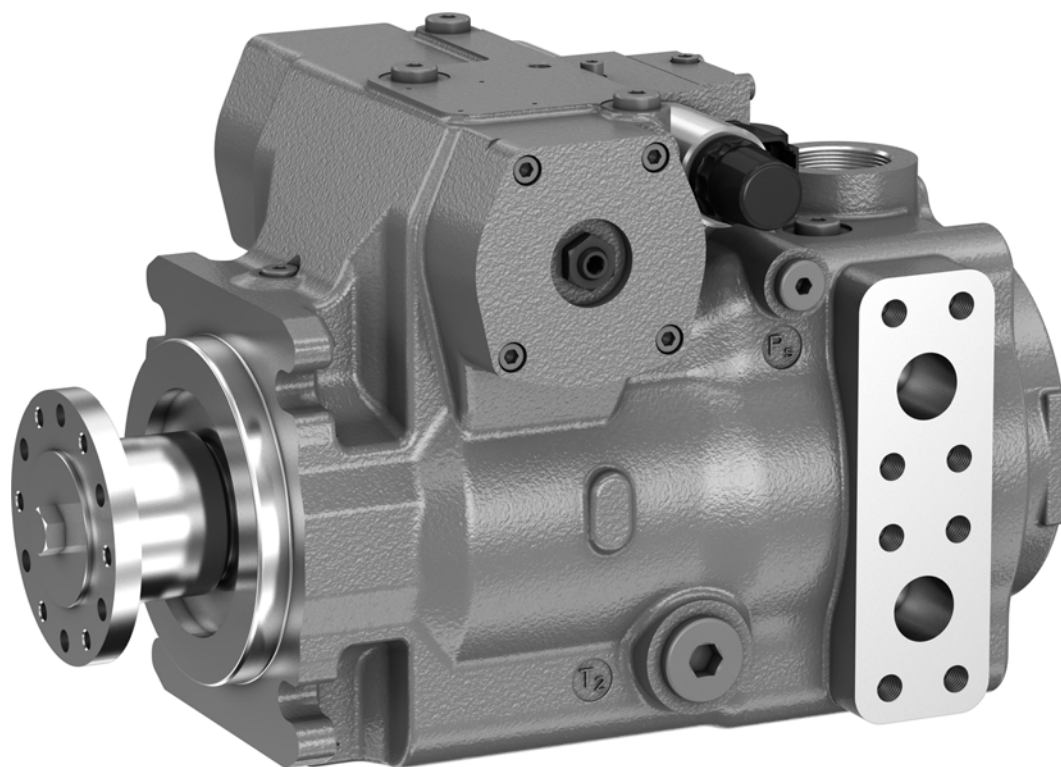

© Bosch Rexroth AG 2016. All rights reserved, also regarding any disposal, exploitation, reproduction, editing, distribution, as well as in the event of applications for industrial property rights. The data specified within only serves to describe the product. No statements concerning a certain condition or suitability for a certain application can be derived from our information. The information given does not release the user from the obligation of own judgment and verification. It must be remembered that our products are subject to a natural process of wear and aging.

The cover shows an example application. The product delivered may differ from the image on the cover.

The original instruction manual was created in the German language.

# Contents

<b>1</b>	<b>About this documentation</b>	<b>5</b>
1.1	Validity of the documentation	5
1.2	Required and supplementary documentation	5
1.3	Display of information	6
1.3.1	Safety instructions	6
1.3.2	Symbols	7
1.3.3	Designations	7
1.3.4	Abbreviations	7
<b>2</b>	<b>Safety instructions</b>	<b>8</b>
2.1	About this chapter	8
2.2	Intended use	8
2.3	Improper use	8
2.4	Personnel qualifications	9
2.5	General safety instructions	10
2.6	Product-specific safety instructions	11
2.7	Personal protective equipment	14
<b>3</b>	<b>General instructions on damage to property and the product</b>	<b>15</b>
<b>4</b>	<b>Scope of delivery</b>	<b>18</b>
<b>5</b>	<b>About this product</b>	<b>19</b>
5.1	Performance description	19
5.2	Product description	19
5.2.1	Layout of the axial piston unit	19
5.2.2	Functional description	20
5.3	Product identification	21
<b>6</b>	<b>Transport and storage</b>	<b>22</b>
6.1	Transporting the axial piston unit	22
6.1.1	Transporting by hand	22
6.1.2	Transporting with a lifting device	22
6.2	Storing the axial piston unit	24
<b>7</b>	<b>Installation</b>	<b>26</b>
7.1	Unpacking	26
7.2	Installation conditions	26
7.3	Installation position	28
7.3.1	Below-reservoir installation (standard)	28
7.3.2	Above-reservoir installation	29
7.4	Installing the axial piston unit	30
7.4.1	Preparation	30
7.4.2	Dimensions	30
7.4.3	General instructions	31
7.4.4	Installation with coupling	31
7.4.5	Installation on a gearbox	32
7.4.6	Installation with cardan shaft	33
7.4.7	Completing installation	33
7.4.8	Changing the lever position of the HW control	34
7.4.9	Hydraulically connecting the axial piston unit	35
7.4.10	Electrically connecting the axial piston unit	39
7.5	Performing flushing cycle	40

<b>8</b>	<b>Commissioning</b>	<b>41</b>
8.1	Initial commissioning	41
8.1.1	Filling the axial piston unit	41
8.1.2	Testing the hydraulic fluid supply	43
8.1.3	Performing functional test	43
8.2	Running-in phase	44
8.3	Recommissioning after a standstill	44
<b>9</b>	<b>Operation</b>	<b>45</b>
9.1	Manual override of the electrical control	45
<b>10</b>	<b>Maintenance and repair</b>	<b>46</b>
10.1	Cleaning and care	46
10.2	Inspection	47
10.3	Maintenance	47
10.4	Repair	48
10.5	Spare parts	48
<b>11</b>	<b>Removal and replacement</b>	<b>49</b>
11.1	Required tools	49
11.2	Preparing for removal	49
11.3	Performing removal	49
11.4	Preparing the components for storage or further use	49
<b>12</b>	<b>Disposal</b>	<b>50</b>
<b>13</b>	<b>Extension and conversion</b>	<b>51</b>
<b>14</b>	<b>Troubleshooting</b>	<b>52</b>
14.1	How to proceed for troubleshooting	52
14.2	Malfunction table	53
<b>15</b>	<b>Technical data</b>	<b>57</b>
<b>16</b>	<b>Alphabetical index</b>	<b>58</b>

# 1 About this documentation

## 1.1 Validity of the documentation

This documentation is valid for the following products:


- Axial piston variable pump A10VGT Series 11

This documentation is intended for machine/system manufacturers, assemblers and service engineers.









This documentation contains important information on the safe and appropriate transport, installation, commissioning, operation, maintenance, removal and simple troubleshooting of the axial piston unit.

- ▶ Read this documentation completely and in particular the chapter 2 “Safety instructions” on page 8 and chapter 3 “General instructions on damage to property and the product” on page 15 before you start work with the axial piston unit.

## 1.2 Required and supplementary documentation

- ▶ Only commission the axial piston unit if the documentation marked with the book symbol  is available to you and you have understood and observed it.

**Table 1: Required and supplementary documentation**

	<b>Title</b>	<b>Document number</b>	<b>Document type</b>
	<b>Order confirmation</b> Contains the order-related technical data of your Axial piston variable pump A10VGT.	–	Order confirmation
	<b>Installation drawing</b> Contains the outer dimensions, all connections and the hydraulic circuit diagram for your Axial piston variable pump A10VGT.	Please request the installation drawing from your contact at Bosch Rexroth.	Installation drawing
	<b>Axial piston variable pump A10VGT</b> Contains the permissible technical data.	92770	Data sheet
	<b>Mineral oil-based hydraulic fluids and related hydrocarbons</b> Describes the requirements on a mineral oil-based hydraulic fluid and related hydrocarbons for operation with Rexroth hydraulic components, and assists you in selecting a hydraulic fluid for your hydraulic system.	90220	Data sheet
	<b>Environmentally acceptable hydraulic fluids</b> Describes the requirements on an environmentally acceptable hydraulic fluid for operation with Rexroth hydraulic components and assists you in selecting a hydraulic fluid for your hydraulic system.	90221	Data sheet
	<b>Fire-resistant, water-free hydraulic fluids (HFDR/HFDR)</b> Describes the requirements on fire-resistant, water-free hydraulic fluids (HFDR/HFDR) for operation with Rexroth hydraulic components and assists you in selecting a hydraulic fluid for your hydraulic system.	90222	Data sheet
	<b>Information on the use of hydrostatic drives at low temperatures</b> Contains additional information on the use of Rexroth axial piston units at low temperatures.	90300-03-B	Manual
	<b>Storage and preservation of axial piston units</b> Contains additional information on storage and preservation.	90312	Data sheet

### 1.3 Display of information

Standardized safety instructions, symbols, terms and abbreviations are used throughout this documentation so that you can work quickly and safely with your product. To give you a better understanding they are explained in the sections below.

#### 1.3.1 Safety instructions




This documentation includes safety instructions in chapter 2.6 “Product-specific safety instructions” on page 11 and in chapter 3 “General instructions on damage to property and the product” on page 15 and before a sequence of actions or an instruction for action involving a risk of personal injury or property damage. The described danger prevention measures must be observed.

Safety instructions are set out as follows:

 <b>SIGNAL WORD</b>
<p><b>Type and source of danger!</b>            Consequences of noncompliance            ► Measures to prevent danger</p>

- **Warning sign:** draws attention to the danger
- **Signal word:** identifies the degree of the danger
- **Type and source of danger:** indicates the type and source of the danger
- **Consequences:** describes what occurs if the safety instructions are not complied with
- **Precautions:** states how the danger can be avoided


**Table 2: Hazard classes as defined in ANSI Z535.6**

Warning sign, signal word	Meaning
 <b>DANGER</b>	Identifies a dangerous situation that will result in death or serious injuries if it is not avoided.
 <b>WARNING</b>	Identifies a dangerous situation that may result in death or serious injuries if it is not avoided.
 <b>CAUTION</b>	Identifies a dangerous situation that may result in minor to moderate injuries if it is not avoided.
<b>NOTICE</b>	Property damage: The product or the environment may get damaged.

### 1.3.2 Symbols

The following symbols indicate information that is not safety-relevant but increases understanding of the documentation.

**Table 3: Meaning of the symbols**

Symbol	Meaning
	If this information is disregarded, the product cannot be used and/or operated to the optimum extent.
▶	Single, independent action
1.	Numbered instruction:
2.	The numbers indicate that the actions must be completed one after the other.
3.	

### 1.3.3 Designations

This documentation uses the following designations:

**Table 4: Designations**

Designation	Meaning
A10VGT	Axial piston variable pump, closed circuit, for use in concrete mixer truck
Threaded plug	Metal screw, pressure-resistant
Protective plug	Made out of plastic, not pressure-resistant, only for transportation

As a generic term for “Axial piston variable pump A10VGT”, the designation “axial piston unit” will be used hereinafter.

### 1.3.4 Abbreviations

This documentation uses the following abbreviations:

**Table 5: Abbreviations**

Abbreviation	Meaning
ATEX	EC directive on explosion protection ( <b>A</b> tmosphère <b>e</b> xplosible)
DIN	<b>D</b> eutsches Institut für <b>N</b> ormung (German Institute for Standardization)
EP	<b>P</b> roportional control, <b>e</b> lectric
HW	Proportional control, hydraulic, mechanical servo
ISO	<b>I</b> nternational <b>O</b> rganization for <b>S</b> tandardization
JIS	<b>J</b> apan <b>I</b> ndustrial <b>S</b> tandard
RE	<b>R</b> exroth document in the <b>E</b> nglish language
VDI 2230	Directive for the systematic calculation of high duty bolted joints and joints with one cylindrical bolt from the VDI ( <b>V</b> erein <b>D</b> eutscher <b>I</b> ngenieure - <b>A</b> ssociation of German Engineers)

## 2 Safety instructions

### 2.1 About this chapter

The axial piston unit has been manufactured according to the generally accepted rules of current technology. There is, however, still a danger of personal injury or property damage if this chapter and the safety instructions in this documentation are not complied with.

- ▶ Read this documentation completely and thoroughly before working with the axial piston unit.
- ▶ Keep this documentation in a location where it is accessible to all users at all times.
- ▶ Always include the required documentation when you pass the axial piston unit on to third parties.

### 2.2 Intended use

Axial piston units are hydraulic components, meaning that in their application area they are classified neither as complete nor as partly completed machinery in the sense of the EC Machinery Directive 2006/42/EC. A component is exclusively intended to form a partly complete machine or a complete machine together with other components. The component may only be commissioned after it has been installed in the machine/system for which it is intended and the safety of the entire system has been established in accordance with the machinery directive.

This product is intended for the following use:

The axial piston unit A10VGT is only approved as a pump for hydrostatic drum drives of concrete mixer trucks in a closed circuit. The pump has been specifically designed and constructed for the load collectives in this particular application.

The performance data given is based on this load collective.

- ▶ Observe the technical data, the application and operating conditions and the performance limits as specified in data sheet 92770 and in the order confirmation. Information about approved hydraulic fluids can be found in data sheet 92770.

The axial piston unit is only intended for professional use and not for private use. Intended use includes having read and understood the complete documentation, especially chapter 2 "Safety instructions" on page 8.

### 2.3 Improper use

Any use other than that described as intended use shall be considered as improper and is therefore impermissible.

Bosch Rexroth AG is not liable for damages resulting from improper use. The user bears all risks from improper use.

The following foreseeable faulty usages are also be considered to be improper (this list does not claim to be exhaustive):

- Use outside the operating parameters approved in the data sheet or in the order confirmation (unless specifically approved by the customer)
- Use of non-approved fluids, e.g. water or polyurethane components
- Changes to factory settings by unauthorized persons



- Use of add-ons (e.g., control unit, valves) not in combination with the specified Rexroth components
- Use of the axial piston unit under water at a depth of more than 10 meters without the necessary additional measures, e.g., pressure equalization. Units with electrical components (e.g., sensors) generally cannot come into contact with water.
- Use of the axial piston unit under a continuous pressure differential between case to ambient pressure greater than 2 bar, whereby the ambient pressure must always be lower than the case pressure. Momentary ( $t < 0.1$  s) pressure peaks of up to 10 bar are allowed. Beyond this, the maximum case pressure specified on the data sheet cannot be exceeded.
- Use of the axial piston unit in explosive environments unless the component or machine/system has been certified as compliant with the ATEX directive 2014/34/EU
- Use of the axial piston unit in a corrosive atmosphere
- Use of the axial piston unit in aircraft or spacecraft

## 2.4 Personnel qualifications

The activities described in this documentation require basic mechanical, electrical and hydraulics expertise, as well as knowledge of the associated technical terms. For transporting and handling the product, additional knowledge is necessary with regard to working with lifting devices and their slings. In order to ensure safe use, these activities should only be performed by skilled personnel or an instructed person under the direction and supervision of skilled personnel.

Skilled persons are those who can recognize possible dangers and take the appropriate safety measures due to their professional training, knowledge, and experience, as well as their understanding of the relevant regulations pertaining to the work to be done. Skilled personnel must follow the rules relevant to their field and have the necessary hydraulics expert knowledge.

Hydraulic expert knowledge includes:

- reading and fully understanding hydraulic circuit diagrams,
- especially fully understanding the relationships with regard to safety devices
- and understanding how hydraulic components work and are put together.



Bosch Rexroth offers training support for specialized fields. An overview of the training contents can be found online at: [www.boschrexroth.com/training](http://www.boschrexroth.com/training).

## 2.5 General safety instructions

- Observe the applicable accident prevention and environmental protection regulations.
- Observe the safety regulations and provisions of the country in which the product is used/operated.
- Use Rexroth products only when they are in good working order.
- Observe all notices on the product.
- Persons who install, operate, remove or maintain Rexroth products may not be under the influence of alcohol, drugs or medication that may affect their reaction time.
- Only use genuine Rexroth accessories and spare parts to ensure there is no hazard to persons due to unsuitable spare parts.
- Observe the technical data and ambient conditions specified in the product documentation.
- If unsuitable products are installed or used in applications that are of relevance to safety, unexpected operating conditions may occur in the application, which could result in injury to personnel or property damage. For this reason, only use the product in safety-relevant applications if this use is expressly specified and permitted in the product documentation, for example in explosion protection applications or in safety-related parts of a control system (functional safety).
- You may only commission the product if it has been determined that the end product (e.g. machinery or system) in which the Rexroth products are installed complies with the country-specific provisions, safety regulations and standards for the application.
- Use tools appropriate for the work being performed and wear appropriate protective clothing to prevent punctures and cuts (e.g., when removing protective covers, disassembly).
- There is a risk of entanglement when operating the axial piston unit with a bare shaft end. Check whether or not your machine requires additional safety measures for your application. If necessary, make sure that these are properly implemented.
- Depending on the type of control used, electromagnetic effects can be produced when using solenoids. When a direct current is applied, solenoids do not cause electromagnetic interference nor is their operation impaired by electromagnetic interference. Other behavior can result when a modulated direct current (e.g. PWM signal) is applied. Potential electromagnetic interference for persons (e.g. persons with a pacemaker) and other components must be tested by the machine manufacturer.

## 2.6 Product-specific safety instructions

The following safety instructions apply to chapters 6 to 14.

### **WARNING**

#### **Danger from excessively high pressure!**

Risk of death or injury, or property damage!

Improperly changing the factory pressure settings can result in a pressure increase beyond the permissible maximum pressure.

Operating the unit above the permissible maximum pressure can cause components to burst and hydraulic fluid to escape under high pressure.

- ▶ Changes to the factory settings must only be made by Bosch Rexroth specialists.
- ▶ In addition, a pressure relief valve is required in the hydraulic system as a back-up. If the axial piston unit is equipped with a pressure cut-off and/or a pressure controller, this is not an adequate back-up against pressure overload.

#### **Danger from suspended loads!**

Risk of death or injury, or property damage!

Improper transportation may cause the axial piston unit to fall down and lead to injuries e.g. crushing or broken bones or damage to the product.

- ▶ Make sure that the load bearing capacity of the lifting device is sufficient to safely bear the weight of the axial piston unit.
- ▶ Never stand or put your hands under a suspended load.
- ▶ Make sure the unit remains stable during transport.
- ▶ Wear your personal protective equipment (e.g. safety goggles, safety gloves, suitable working clothes, safety shoes).
- ▶ Use suitable lifting devices for transportation.
- ▶ Observe the prescribed position of the lifting strap.
- ▶ Observe the national laws and regulations on work and health protection and transportation.

#### **System/machine under pressure!**

Danger to life or risk of injury, serious injuries when working on machines/systems not secured! Risk of property damage!

- ▶ Switch off the entire system and secure it against reconnection according to parameters provided by the machine/system manufacturer.
- ▶ Make sure that all relevant components of the hydraulic system are depressurized. Follow the parameters given by the machine/system manufacturer.
- ▶ Note that the hydraulic system may still be under pressure even after the pressure supply itself has been disconnected.
- ▶ Do not disconnect any line connections, ports and components as long as the hydraulic system is under pressure.



## WARNING

### Escaping oil mist!

Risk of explosion and fire, health hazard, risk of environmental pollution!

- ▶ Depressurize the relevant machine/system component and repair the leak.
- ▶ Only perform welding work when the machine/system is depressurized.
- ▶ Keep open flames and ignition sources away from the axial piston unit.
- ▶ If axial piston units are located in the vicinity of ignition sources or powerful thermal radiators, a shield must be erected to ensure that any escaped hydraulic fluid cannot be ignited, and to protect hose lines from premature aging.

### Electrical voltage!

Risk of injury from electric shock or risk of property damage!

- ▶ Always set up the relevant part of the machine/system so that it is free of electrical voltage before you install the product or when connecting and disconnecting connectors. Protect the machine/system against being re-energized.

### Danger from unforeseen machine movement!

Danger to life or risk of injury! Unintentional or careless actuation of the manual override of the solenoids can cause unexpected machine movements.

- ▶ Use the manual override only for functional testing or in the event of technical malfunctions.
- ▶ Using the manual override on a permanent basis (e.g. by wedging, blocking) is not permitted.
- ▶ The use of the manual override is only permitted with limited technical data (e.g.  $0.25 \times$  maximum data).
- ▶ Check whether additional protective measures are necessary for the application on your machine in order to avoid unintentional actuation. If necessary, make sure that these are properly implemented.
- ▶ Wear suitable protective clothing.

### Restriction of the control function!

Risk of injury or property damage!

Moving parts in control equipment (e.g. valve spools) can, under certain circumstances, get stuck in position as a result of contamination (e.g. impure hydraulic fluid, abrasion, or residual dirt from components). As a result, the hydraulic fluid flow and the build-up of torque in the axial piston unit can no longer respond correctly to the operator's specifications. Even the use of various filter elements (external or internal flow filtration) will not rule out a fault but merely reduce the risk.

- ▶ Check whether your application requires that remedial measures be taken on your machine in order to bring the driven consumer into a safe position (e.g. safe stop).
- ▶ If necessary, make sure that these are properly implemented.

## **WARNING**

### **Restriction of the load holding function in lifting winches!**

Risk of injury or property damage!

Moving parts in high-pressure relief valves may in certain circumstances become stuck in an undefined position due to contamination (e.g. contaminated hydraulic fluid). This can result in restriction or loss of the load holding function in lifting winches.

- ▶ Check whether the application on your machine requires additional safety measures, in order to keep the load in a safe position.
- ▶ If necessary, make sure that these are properly implemented.

## **CAUTION**

### **High noise development during operation!**

Risk of hearing damage or hearing loss!

The noise emission of axial piston units depends on, among other factors, rotational speed, working pressure and installation conditions. The sound pressure level may rise above 70 dB (A) in certain application conditions.

- ▶ Always wear hearing protection when in the vicinity of the operating axial piston unit.

### **Hot surfaces on the axial piston unit!**

Risk of burning!

- ▶ Allow the axial piston unit to cool down sufficiently before touching it.
- ▶ Wear heat-resistant protective clothing, e.g. gloves.

### **Improper routing of cables and lines!**

Risk of stumbling and property damage. Improper routing of cables and lines can cause a risk of stumbling as well as damage to equipment and components, e.g. lines and connectors tearing.

- ▶ Always lay cables and lines in such a way that no one can trip over them, that they do not become kinked or twisted, do not rub on edges and do not run without adequate protection through sharp-edged ducts.

### **Contact with hydraulic fluid!**

Risk of adverse health effects, e.g. eye injury, skin irritation, poisoning from inhalation!

- ▶ Avoid contact with hydraulic fluids.
- ▶ When working with hydraulic fluids, strictly observe the safety instructions provided by the lubricant manufacturer.
- ▶ Wear your personal protective equipment (e.g. safety goggles, safety gloves, suitable working clothes, safety shoes).
- ▶ Consult a doctor immediately if hydraulic fluid gets in your eyes or bloodstream, or is swallowed.

### **Escaping hydraulic fluid due to machine/system leakage!**

Risk of burns and risk of injury due to escaping oil jet!

- ▶ Depressurize the relevant machine/system component and repair the leak.
- ▶ Never attempt to block or seal the leak or oil jet with a cloth.

## CAUTION

### **Danger from improper handling!**

Risk of slipping! Risk of slipping on wet surfaces when climbing on the axial piston unit.

- ▶ Never grab or climb onto the axial piston unit.
- ▶ Check how to safely get on top of the machine/system.

## **2.7 Personal protective equipment**

Personal protective equipment is the responsibility of the user of the axial piston unit. Observe the safety regulations and provisions in your country.

All pieces of personal protective equipment must be intact.

### 3 General instructions on damage to property and the product

The instructions below apply to chapters 6 to 14.

## **NOTICE**

### **Danger from improper handling!**

Product can get damaged!

- ▶ Do not expose the product to excessive mechanical loads.
- ▶ Never grab or climb onto the product.
- ▶ Do not place/lay any objects on the product.
- ▶ Do not strike the drive shaft of the axial piston unit.
- ▶ Do not set/place the axial piston unit on the drive shaft or attachment parts.
- ▶ Do not strike assembled parts (e.g., sensors or valves).
- ▶ Do not strike sealing surfaces (e.g. working ports).
- ▶ Leave the protective covers on the axial piston unit until you connect the lines.
- ▶ Disconnect all electrical connectors before electro-welding or painting operations.
- ▶ Make certain that the electronic components (e.g. sensors) do not become electrostatically charged (e.g. during painting operations).

### **Risk of property damage due to inadequate lubrication!**

Product can get damaged or destroyed!

- ▶ Never operate the axial piston unit with insufficient hydraulic fluid. Specifically, make sure that the rotary group has sufficient lubrication.
- ▶ When commissioning a machine/system, make sure that the housing area and the working lines of the axial piston unit are filled with hydraulic fluid and remain filled during operation.
- ▶ Check the hydraulic fluid level in the housing area regularly; if necessary, recommission. With above-reservoir installation, the housing area may drain via the drain line after longer periods of disuse (air enters via the shaft seal) or via the working line (gap leakage). This means the bearings are insufficiently lubricated when the system is turned on.
- ▶ Make sure that the suction line is always filled with hydraulic fluid during commissioning and operation.

### **Mixing of hydraulic fluids!**

Product can get damaged!

- ▶ Before installation, remove all fluids from the axial piston unit to prevent mixing with the hydraulic fluid used in the machine/system.
- ▶ Any mixing of hydraulic fluids from different manufacturers or different types from the same manufacturer is generally not permitted.

## **NOTICE**

### **Contamination of the hydraulic fluid!**

The cleanliness of the hydraulic fluid has a considerable impact on the cleanliness and service life of the hydraulic system. Contamination of the hydraulic fluid can cause premature wear and malfunctions!

- ▶ Make sure that the working environment at the installation site is fully free of dust and foreign substances in order to prevent foreign particles, such as welding beads or metal cuttings, from getting into the hydraulic lines and causing product wear or malfunctions. The axial piston unit must be installed in clean condition.
- ▶ Use only clean connections, hydraulic lines and assembled parts (e.g. measuring devices).
- ▶ No contamination may enter the ports when they are sealed.
- ▶ Before commissioning, make sure that all hydraulic connections are tight and that all of the seals and plug-in connections are installed correctly to ensure that they are leak proof and fluids and foreign particles are prevented from penetrating the product.
- ▶ Use a suitable filter system to filter hydraulic fluid during filling to minimize solid particle contamination and water in the hydraulic system.

### **Improper cleaning!**

Product can get damaged!

- ▶ Plug all openings with the appropriate protection equipment in order to prevent cleaning agents from entering the hydraulic system.
- ▶ Never use solvents or corrosive cleaning agents. Use only water and, if necessary, a mild cleaning agent to clean the axial piston unit.
- ▶ Do not point a high-pressure cleaner at sensitive components, e.g. shaft seal, electrical connections and components.
- ▶ Use fiber-free cloths for cleaning.

### **Environmental pollution due to improper disposal!**

Careless disposal of the axial piston unit and its assembled parts, the hydraulic fluid and the packaging material can result in environmental pollution!

- ▶ Dispose of the axial piston unit, hydraulic fluid and packaging in accordance with the national regulations in your country.
- ▶ Dispose of the hydraulic fluid in accordance with the applicable safety data sheet for the hydraulic fluid.

### **Danger from chemical or corrosive environmental conditions!**

Product can get damaged! If the axial piston unit is exposed to chemical or corrosive environmental conditions, such as sea water, fertilizer or road salt, it can result in corrosion or, in extreme cases, malfunction. Hydraulic fluid can escape if leaks occur.

- ▶ Take appropriate steps to protect the axial piston unit from chemical or corrosive environmental conditions.



## **NOTICE**

### **Escaping or spilling hydraulic fluid!**

Risk of environmental pollution and contamination of ground water!

- ▶ Always place a collecting pan under the axial piston unit when filling and draining the hydraulic fluid.
- ▶ Use an oil binding agent if hydraulic fluid is spilled.
- ▶ Observe the parameters in the safety data sheet for the hydraulic fluid and the specifications provided by the system manufacturer.

### **Danger from hot components!**


Nearby products can get damaged! Components which heat up (e.g., solenoids) can cause damage to nearby products if they are too close during installation.

- ▶ When installing the axial piston unit, check the distances to nearby products to ensure that they do not get damaged.

The warranty only applies to the delivered configuration.

The entitlement to warranty cover will be rendered void if the product is incorrectly installed, commissioned or operated, or if it is used or handled improperly.

## 4 Scope of delivery

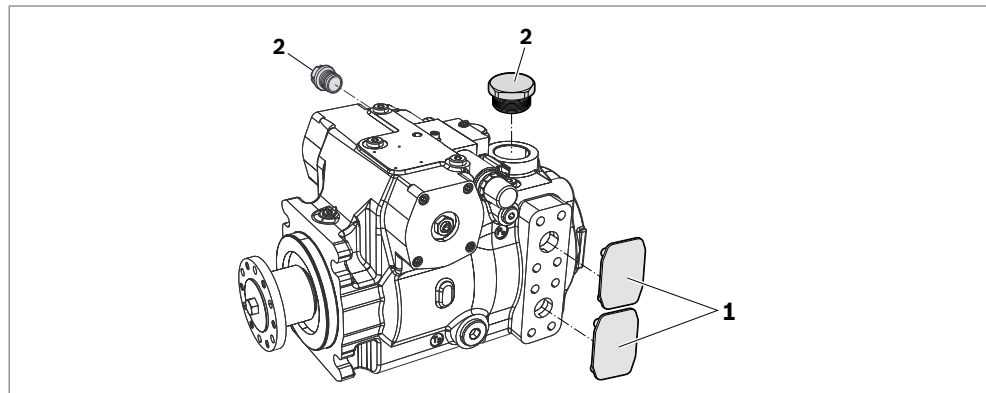

**Fig. 1: Axial piston unit**

The following is included in the scope of delivery:

- Axial piston unit as per order confirmation

The following parts are also assembled prior to delivery:

- Protective covers (**1**)
- Protective plug/threaded plug (**2**)

## 5 About this product

### 5.1 Performance description

The Axial piston variable pump generates, controls and regulates a hydraulic fluid flow. It is designed as a pump for hydrostatic drum drives of concrete mixer trucks in a closed circuit. The pump has been specifically designed and constructed for the load collectives in this particular application. The performance data given is based on this load collective.

Refer to data sheet 92770 and the order confirmation for the technical data, operating conditions and operating limits of the axial piston unit.

### 5.2 Product description

The A10VGT is an Axial piston variable pump with swashplate design for hydrostatic drives in closed circuits. The flow is proportional to the drive speed and displacement. The flow can be steplessly changed by controlling the cradle (**11**).

For axial piston units with swashplate design, the pistons are arranged axially relative to the drive shaft.

#### Closed circuit

In the closed circuit, the hydraulic fluid flows from the hydraulic pump to the consumer, e.g. hydraulic motor and from there directly back to the hydraulic pump. There is a high-pressure side and a low-pressure side which alternate depending on which side is under load.

#### 5.2.1 Layout of the axial piston unit

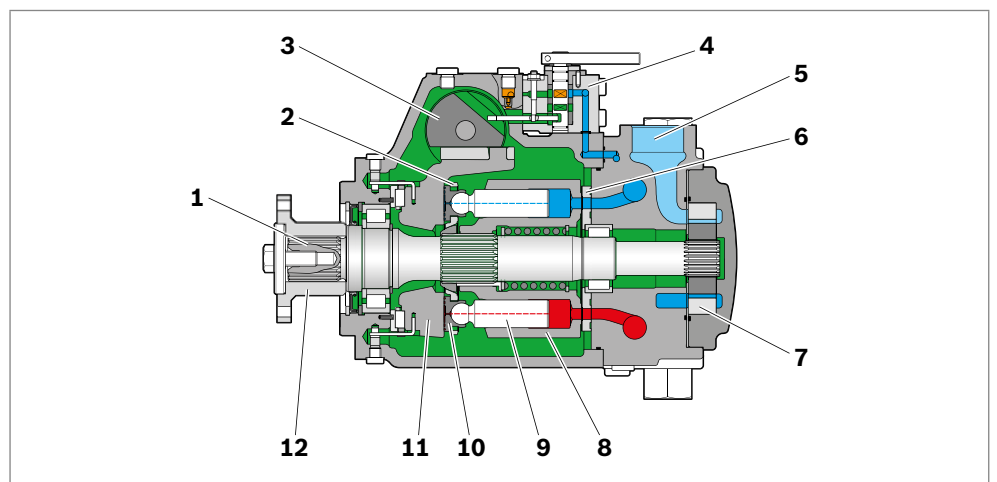


Fig. 2: Layout of the A10VGT Series 11

<b>1</b> Drive shaft	<b>5</b> Suction port	<b>9</b> Piston
<b>2</b> Retaining plate	<b>6</b> Control plate (distributor plate)	<b>10</b> Slipper pad
<b>3</b> Stroking piston	<b>7</b> Boost pump	<b>11</b> Cradle
<b>4</b> Control unit (here HW as example)	<b>8</b> Cylinder	<b>12</b> Coupling flange (optional)

### 5.2.2 Functional description

**Pump** Torque and rotational speed are applied to the drive shaft **(1)** by a drive motor. The drive shaft is connected by splines to the cylinder **(8)** to set this in motion. With every revolution, the pistons **(9)** execute a stroke in the cylinder bores, the size of which depends on the pitch of the cradle **(11)**. The slipper pads **(10)** are held on with the pistons and guided along the glide surface of the cradle by the retaining plate **(2)**. The pitch of the swashplate during a rotation causes each piston to move over the bottom and top dead centers and back to its initial position. Here, hydraulic fluid is fed in and drained out through the two control slots in the control plate **(5)** according to the stroke displacement. On the high-pressure side the hydraulic fluid is pushed out of the cylinder chamber and into the hydraulic system by the pistons. At the same time, hydraulic fluid flows into the growing piston chamber on the low-pressure side. In a closed circuit, supported by the return and boost pressure.

**High-pressure safeguarding** The two high-pressure relief valves protect the hydrostatic transmission (pump and motor) from overloading. They limit the maximum pressure in the respective high-pressure line and serve simultaneously as boost valves. High-pressure relief valves are not working valves and are only suitable for pressure peaks or high rates of pressure change.

**Boost pump** The boost pump **(7)** continuously supplies a sufficient volume of fluid (boost volume) from a small reservoir to the low-pressure side of the closed circuit via a check valve to replenish the internal leakage of the variable pump and consumer. The boost pump is an internal gear pump which is driven directly via the drive shaft.

**Sequence valve (optional)** Actuation of the sequence valve establishes pressure equilibrium in the stroking chambers. The spring in the stroking chamber moves the stroking piston towards the central position (neutral position). The reset function is influenced by the current working pressure and the rotational speed.

- ▶ Use an appropriate emergency-off device to ensure that the drive can be brought to a safe position at any time. The machine or system manufacturer is responsible for the installation of a proper emergency-off device.


**Control** The swivel angle of the cradle **(11)** is infinitely variable. Adjusting the swashplate swivel angle controls the piston stroke and, therefore, the displacement. Adjusting the swashplate through the neutral position will change the direction of flow (making reversing operation possible). The swivel angle is controlled hydraulically by means of the stroking piston. The cradle is mounted in swivel bearings for easy motion and the neutral position is spring-centered. Increasing the swivel angle increases the displacement; reducing the angle results in a corresponding reduction in displacement.



Various control devices are available depending on requirements. Information about this can be found in data sheet 92770.

### 5.3 Product identification

The axial piston unit can be identified from the name plate. The following example shows an A10VGT name plate:

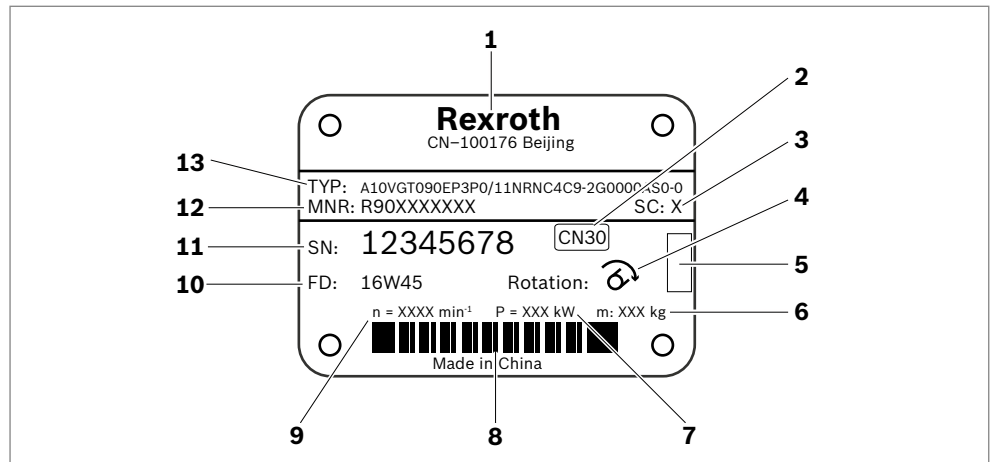

**Fig. 3: Name plate A10VGT**

- |  |  |
|--|--|
| <b>1</b> Manufacturer  | <b>8</b> Bar code                                  |
| <b>2</b> Internal plant designation                                      | <b>9</b> Rotational speed                          |
| <b>3</b> Sample category (optional)                                      | <b>10</b> Manufacturing date                       |
| <b>4</b> Direction of rotation (viewed on drive shaft) – here: clockwise | <b>11</b> Serial number                            |
| <b>5</b> Specified area for inspection stamp                             | <b>12</b> Material number of the axial piston unit |
| <b>6</b> Weight  | <b>13</b> Type code                                |
| <b>7</b> Power   |  |

## 6 Transport and storage

- ▶ Always observe the required ambient conditions for transport and storage, see Chapter 6.2 “Storing the axial piston unit” on page 24.



Notes on unpacking can be found in Chapter 7.1 “Unpacking” on page 26.

### 6.1 Transporting the axial piston unit

The following transportation options are available depending on the weight and duration of transport:

- Transporting by hand
- Transporting with a lifting device (eye bolt or lifting strap)

#### Dimensions and weights

**Table 6: Dimensions and weights**

Size		71	90	115
Weight	kg	51	51	59
Width	mm	Dimensions vary by equipment. The values applicable for your axial piston unit can be found in the installation drawing (request if necessary).		
Height	mm			
Depth	mm			

Weight may vary by equipment.

#### 6.1.1 Transporting by hand

Axial piston units with a weight of up to 15 kg can be transported manually for a short time if necessary.

#### **CAUTION!** Danger from heavy loads!

Health hazard from carrying axial piston units.

- ▶ Use suitable lifting, lowering and moving methods.
- ▶ Wear your personal protective equipment (e.g. safety goggles, safety gloves, suitable working clothes, safety shoes).
- ▶ Do not use sensitive attachments to transport the axial piston unit (e.g., sensors or valves).
- ▶ Carefully place the axial piston unit on the seating to prevent it from being damaged.


#### 6.1.2 Transporting with a lifting device

For transporting, the axial piston unit can be connected to a lifting device via an eye bolt or a lifting strap.

#### **Transport with eye bolt in the casing (only size 115)**

The axial piston unit can be lifted using the screwed-in eye bolt (**1**) as shown in Fig. 4.

- ▶ To do this, screw a suitable eye bolt (**1**) completely into the female thread on the casing of the axial piston unit.  
Size of the female thread: M10, 17.5 mm deep (DIN 13)  
Suitable eye bolt: M10 – C15E (DIN 580).
- ▶ Make sure that the eye bolt is adequately dimensioned for the weight of the axial piston unit.

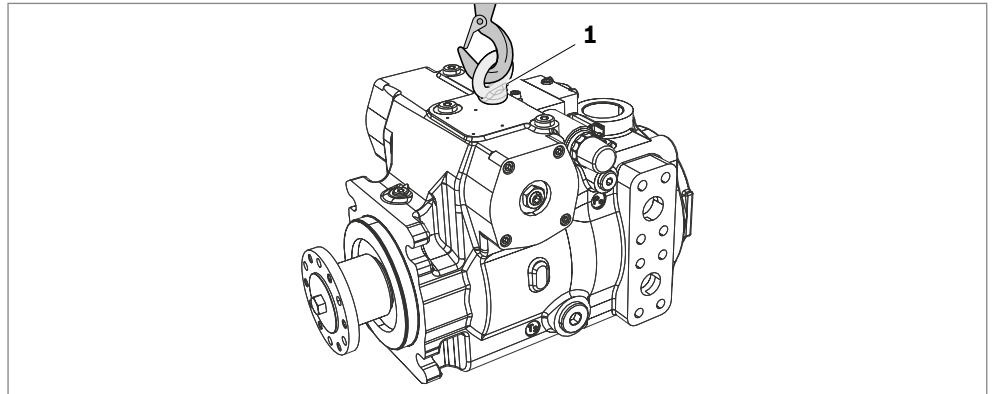


**Fig. 4: Fixing the eye bolt in the casing (only size 115)**

**Transport with eye bolt  
in the drive shaft**

**Valid for all sizes (only for versions without coupling flange):**

The axial piston unit can be transported suspended from an eye bolt screwed into the drive shaft as long as only outward (pulling) axial forces are applied.

- ▶ For all female threads, use a stud end from the same system of units and of the correct size.
- ▶ To do this, screw an eye bolt completely into the female thread on the drive shaft. The thread size is stated in the installation drawing.
- ▶ Make sure that the eye bolt can bear the total weight of the axial piston unit plus 20%. You can hoist the axial piston unit as shown in Fig. 5 with the eye bolt screwed into the drive shaft.

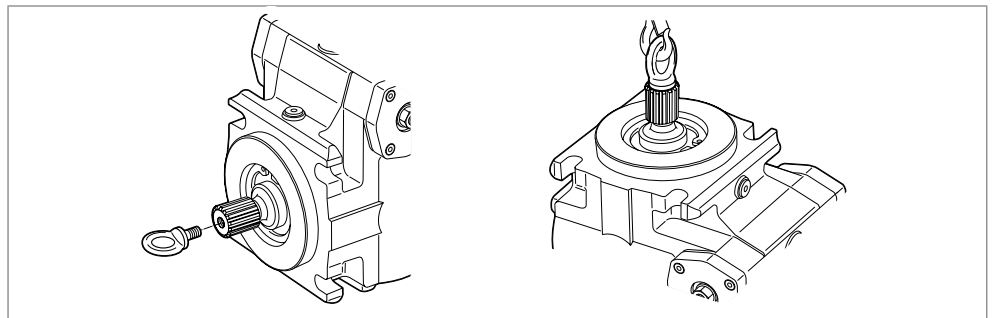

**Fig. 5: Mounting the eye bolt in the drive shaft**


**Transport with lifting strap**

**WARNING!** Danger from suspended loads!

During transport with a lifting device, the axial piston unit can topple out of the lifting strap and cause injuries.

- ▶ Use the widest possible lifting strap.
- ▶ Make sure that the axial piston unit is securely fixed with the lifting strap.
- ▶ Only guide the axial piston unit by hand for fine positioning and to avoid oscillations.
- ▶ Never stand or put your hands under a suspended load.

- ▶ Place the lifting strap around the axial piston unit in such a way that it does not pass over attachments (e.g., valves, piping) and that the axial piston unit is not suspended from attachments (see Fig. 6).

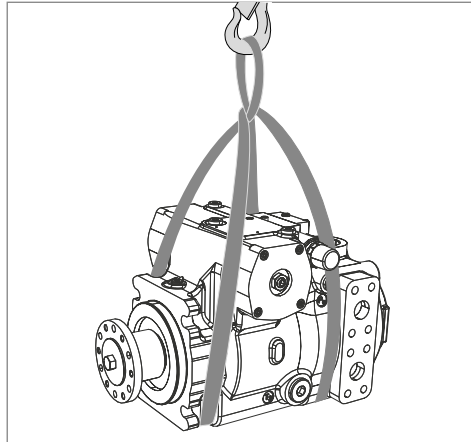

**Fig. 6: Transport with lifting strap**

## 6.2 Storing the axial piston unit

### Requirements

- The storage areas must be free of corrosive materials and gases.
  - To prevent damage to the seals, ozone-forming equipment (e.g., mercury-vapor lamps, high voltage equipment, electric motors, sources of electrical sparks or electrical discharge) must not be operated in storage areas.
  - The storage areas must be dry.  
Recommended relative humidity  $\leq 60\%$ .
  - Ideal storage temperature:  $+5\text{ °C}$  to  $+20\text{ °C}$ .
  - Minimum storage temperature:  $-50\text{ °C}$ .
  - Maximum storage temperature:  $+60\text{ °C}$ .
  - Keep out of direct sunlight.
  - Do not stack axial piston units and store them in a shock-proof manner.
  - Do not store the axial piston unit on the drive shaft or attachments, e.g., sensors or valves.
  - For further storage conditions, see Table 7.
- ▶ Check the axial piston unit monthly to ensure proper storage.

### After delivery

The axial piston units are provided ex-works with corrosion protection packaging (corrosion protection film).

Table 7 lists the maximum permissible storage times for an originally packed axial piston unit as per data sheet 90312.

**Table 7: Storage time with factory corrosion protection**

Storage conditions	Standard corrosion protection	Long-term corrosion protection (optional)
Closed, dry room, at a consistent temperature between $5\text{ °C}$ and $20\text{ °C}$ throughout. Undamaged and sealed corrosion protection film.	Maximum 12 months	Maximum 24 months





Warranty is void if the requirements and storage conditions are not observed or after expiration of the maximum storage time (see Table 7).

Procedure after expiration of the maximum storage time:

1. Check the entire axial piston unit for damage and corrosion prior to installation.
2. Perform a test run to check the axial piston unit for proper function and leak-tightness.
3. If the storage time exceeds 24 months, the shaft seal must be replaced.



After expiration of the maximum storage time, we recommend that you have the axial piston unit inspected by your Bosch Rexroth service partner.

In the event of questions regarding repair and spare parts, contact your responsible Bosch Rexroth service partner or the service department of the manufacturer's plant for the axial piston unit, see Chapter 10.5 "Spare parts" on page 48.

#### After removal

A dismantled axial piston unit must be preserved with corrosion protection for the duration of storage.



The following instructions only refer to axial piston units which are operated with a mineral oil-based hydraulic fluid. Other hydraulic fluids require preservation measures that are specifically designed for them. In such cases, consult Bosch Rexroth Service, see Chapter 10.5 "Spare parts" on page 48 for the address.

Bosch Rexroth recommends the following procedure:

1. Clean the axial piston unit, see Chapter 10.1 "Cleaning and care" on page 46.
2. Empty the axial piston unit.
3. For storage times up to 12 months: Coat the inside of the axial piston unit with mineral oil and fill with approx. 100 ml mineral oil.  
For storage times up to 24 months: Fill the axial piston unit with corrosion protection VCI 329 (20 ml).  
The filling is carried out via the drain port **T<sub>1</sub>** or **T<sub>2</sub>**, see chapter 7.4 "Installing the axial piston unit", Fig. 13 on page 37.
4. Plug all ports so they are airtight.
5. Moisten the unpainted areas of the axial piston unit with mineral oil or suitable, easily removable corrosion protection, e.g., acid-free grease.
6. Package the axial piston unit with desiccant in corrosion protection film so it is airtight.
7. Store the axial piston unit in a non-explosive area in a manner that is shock-proof, see "Requirements" on page 24 in this chapter.

## 7 Installation

Prior to installation, the following documents must be to hand:

- Installation drawing for axial piston unit (can be obtained from your contact at Bosch Rexroth)
- Hydraulic circuit diagram for the axial piston unit (in the installation drawing)
- Hydraulic circuit diagram for the machine/system (available from the machine/system manufacturer)
- Order confirmation (contains the order-related technical data for your axial piston unit)
- Data sheet for the axial piston unit (contains the permissible technical data)

### 7.1 Unpacking

The axial piston unit is delivered in a corrosion protection film made of polyethylene material (PE).

**CAUTION!** Danger from parts falling out!

Improperly opening the packaging can result in parts falling out, which can be damaged or cause injury.


- ▶ Place the packaging on a level, solid surface.
- ▶ Only open the packaging from the top.
  
- ▶ Remove the packaging from the axial piston unit.
- ▶ Check the axial piston unit for transport damage and completeness, see Chapter 4 “Scope of delivery” on page 18.
- ▶ Dispose of the packaging material according to the national regulations in your country.

### 7.2 Installation conditions

The installation location and position of the axial piston unit essentially determine the procedures during installation and commissioning (such as when filling and air bleeding the axial piston unit).

- ▶ Fix the axial piston unit so that the expected forces and torques can be transferred without any danger. The machine/system manufacturer is responsible for dimensioning the fasteners.
- ▶ Observe the permissible radial forces on the drive shaft when transferring input/output drive with radial load (belt drives). If necessary, the belt pulley must be stored separately.
- ▶ Make sure that the axial piston unit is air bled and filled with hydraulic fluid during commissioning and operation. Do this also after relatively long standstill periods, since the axial piston unit may drain through the hydraulic lines.
- ▶ The leakage in the housing area must be directed to the reservoir via the highest drain port. Use the line size which is appropriate for the port.
- ▶ Avoid using a check valve in the drain line.
- ▶ To keep noise down, decouple all connecting lines from all vibration-capable components (e.g. reservoir) using elastic elements.
- ▶ Make certain that the suction, drain, and return lines flow into the reservoir below the minimum fluid level in all operating conditions. This will prevent air from being drawn in and foam from being formed.

- ▶ Make certain that a minimum suction pressure of 0.8 bar absolute is present at port “S” (0.5 bar absolute for cold start) during operation in all installation positions and installation locations for the axial piston pump, see Fig. 7. See data sheet for pressure values.

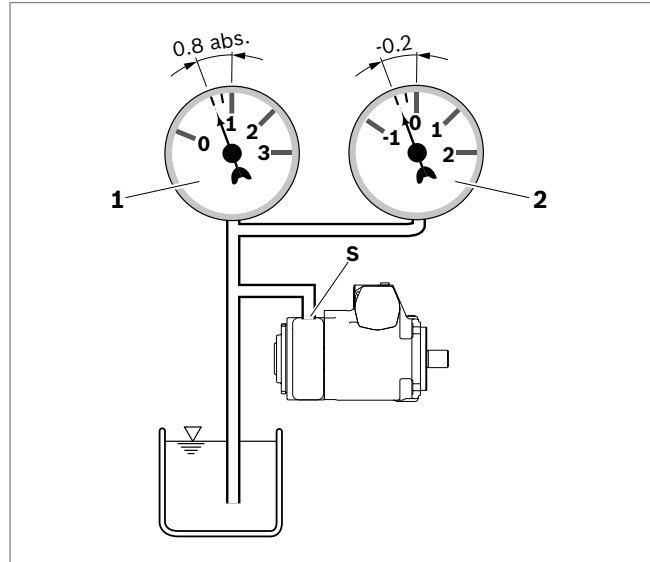

**Fig. 7: Suction pressure**

- 1** Absolute pressure gauge
- 2** Standard pressure gauge (relative)



The suction conditions improve with below-reservoir installation.

- ▶ Make sure that the working environment at the installation site is fully free of dust and foreign substances. The axial piston unit must be installed in clean condition. Contamination of the hydraulic fluid can considerably affect the function and service life of the axial piston unit and its suitability for use in explosive areas.
- ▶ Use fiber-free cloths for cleaning.
- ▶ Use suitable mild cleaning agents to remove lubricants and other difficult-to-remove contamination. Cleaning agents must not enter the hydraulic system.

### 7.3 Installation position

The following installation positions are permissible. The piping layout shown illustrates the basic layout.



If filling the stroking chambers via  $X_1$  to  $X_2$  is not possible in the final installation position, then this must be carried out before installation, e.g. in installation position **2**.



To prevent unexpected actuation and damage, the stroking chambers must be air bled via the ports  $X_1$  and  $X_2$  depending on the installation position.

#### 7.3.1 Below-reservoir installation (standard)

Below-reservoir installation means that the axial piston unit is installed outside of the reservoir and below the minimum fluid level of the reservoir.



Recommended installation position: 1 and 2.

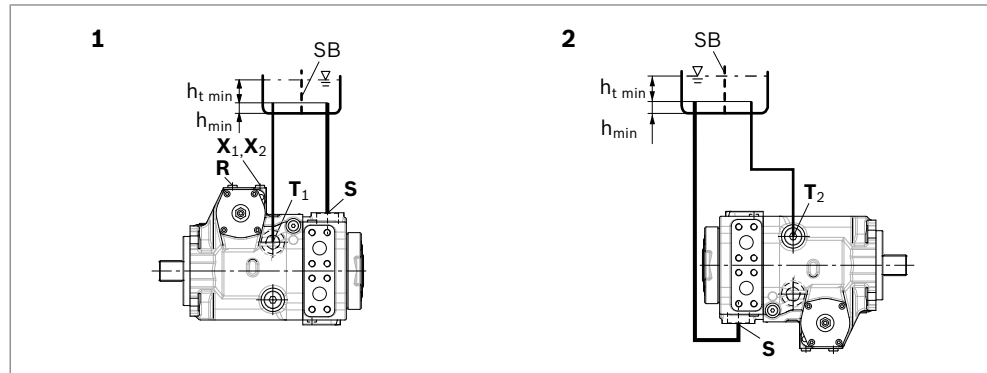


Fig. 8: Below-reservoir installation A10VGT with installation position 1-2

$T_1, T_2$	Highest drain port	$h_{t\ min}$	Minimum required immersion depth (200 mm)
R	Air bleeding	$h_{min}$	Minimum required distance to reservoir bottom (100 mm)
S	Suction port	SB	Baffle (baffle plate)
$X_1, X_2$	Control pressure port		

Table 8: Below-reservoir installation


Installation position	Air bleeding the housing	Air bleeding the stroking chamber	Filling
1 (drive shaft horizontal)	R	$X_1, X_2$	$S + T_1 + X_1 + X_2$
2 (drive shaft horizontal)	–	–	$S + T_2$

### 7.3.2 Above-reservoir installation

Above-reservoir installation means that the axial piston unit is installed above the minimum fluid level of the reservoir.



Observe the maximum permissible suction height  $h_{S \max} = 800 \text{ mm}$ .  
The permissible suction height  $h_S$  is derived from the total pressure loss.

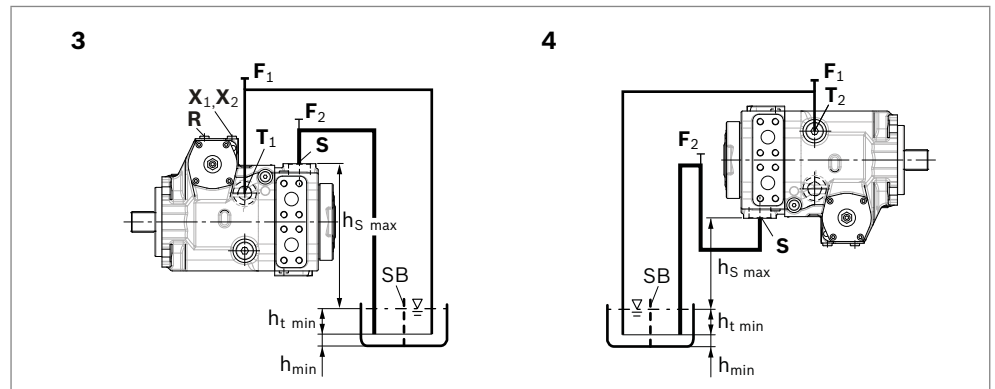

**Fig. 9: Above-reservoir installation A10VGT with installation position 3-4**

<b>T<sub>1</sub>, T<sub>2</sub></b>	Highest drain port	<b>h<sub>t min</sub></b>	Minimum required immersion depth (200 mm)
<b>F<sub>1</sub>, F<sub>2</sub></b>	Filling / air bleeding	<b>h<sub>min</sub></b>	Minimum required distance to reservoir bottom (100 mm)
<b>R</b>	Air bleeding	<b>h<sub>S max</sub></b>	Maximum permissible suction height (800 mm)
<b>S</b>	Suction port	<b>SB</b>	Baffle (baffle plate)
<b>X<sub>1</sub>, X<sub>2</sub></b>	Control pressure port		



Ports **F<sub>1</sub>** and **F<sub>2</sub>** are part of the external piping and must be provided on the customer side to make filling and air bleeding easier.

**Table 9: Above-reservoir installation**

Installation position	Air bleeding the housing	Air bleeding the stroking chamber	Filling
3 (drive shaft horizontal)	F <sub>2</sub> (S) + R	X <sub>1</sub> , X <sub>2</sub>	F <sub>2</sub> (S) + F <sub>1</sub> + X <sub>1</sub> + X <sub>2</sub>
4 (drive shaft horizontal)	F <sub>2</sub> + F <sub>1</sub> (T <sub>2</sub> )	–	F <sub>2</sub> (S) + F <sub>1</sub> (T <sub>2</sub> )

## 7.4 Installing the axial piston unit


### 7.4.1 Preparation

1. Check the specifications on the name plate of the axial piston unit to see if the axial piston unit is correct.
2. Compare the material number and designation (type code) with the details in the order confirmation.



If the material number for the axial piston unit does not correspond to the one in the order confirmation, contact Bosch Rexroth Service for clarification, see Chapter 10.5 “Spare parts” on page 48.

3. Before installing, completely empty the axial piston unit to prevent mixing with the hydraulic fluid used in the machine/system.
4. Check the permissible direction of rotation of the axial piston unit (on the name plate) and make sure that this corresponds to the direction of rotation of the drive motor.

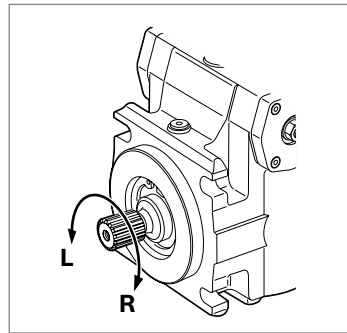

**Fig. 10: Direction of rotation**

- L** Counter-clockwise  
**R** Clockwise



The direction of rotation as specified on the name plate determines the direction of rotation of the axial piston unit as viewed on the drive shaft, see Chapter 5.3 “Product identification” on page 21. For information on the direction of rotation of the drive motor, please refer to the drive motor manufacturer's operating instructions.

### 7.4.2 Dimensions

The installation drawing contains the dimensions for all connections and ports on the axial piston unit. Also observe the manuals provided by the manufacturers of the other hydraulic components when selecting the required tools.

### 7.4.3 General instructions

Follow these general instructions when installing the axial piston unit:

- Note that you can expect certain installation positions to affect the control device. Gravity, dead weight and case pressure can cause minor characteristic shifts and changes in response time.
- Torsional vibrations and speed variations may cause leakages on the shaft seal and increased rotary angular accelerations of the rotary group of the axial piston unit. At risk are diesel drives with a small number of cylinders and low flywheel mass and toothed belt or V-belt drives. Belts can lose a large part of its pre-charge pressure after just a short operating time.  
An automatic clamping device can lessen the speed variations and vibrations and thus avoid resulting damage.  
– When using toothed belts or v-belts to transfer the drive, always use an automatic clamping device.
- On the drive of an axial piston unit, a cardan shaft may cause vibrations and impermissible rotary angular accelerations. Depending on the frequency and temperature, they may result in leakage on the shaft seal and damage to the rotary group.
- If a shared drain line is used for several units, make sure that the respective case pressure is not exceeded. The shared drain line must be dimensioned to ensure that the maximum permissible case pressure of all connected units is not exceeded in any operational conditions, particularly at cold start. If this is not possible, separate drain line must be laid, if necessary.

The type of installation to be used for the axial piston unit depends on the connecting elements to the drive side. The following descriptions explain the installation of the axial piston unit:

- with a coupling
- on a gearbox
- to a cardan shaft

### 7.4.4 Installation with coupling

How to install the axial piston unit with a coupling is described in below:

**NOTICE!** Danger from improper handling!

Product can get damaged!

- ▶ Do not install the coupling hub onto the drive shaft of the axial piston unit by striking it.

1. Install the specified coupling half onto the drive shaft of the axial piston unit according to the instructions of the coupling manufacturer.



The drive shaft of the axial piston unit is equipped with a female thread. Use this female thread to pull the coupling element onto the drive shaft. The size of the female thread can be seen in the installation drawing.

2. Clamp the coupling hub onto the drive shaft or ensure permanent lubrication of the drive shaft. This prevents the formation of frictional corrosion and the associated wear.
3. Transport the axial piston unit to the installation location.
4. Remove dirt and foreign particles from the installation location.
5. Install the coupling on the output shaft of the drive motor in accordance with the specifications provided by the coupling manufacturer.



The axial piston unit must not be tightened down until the coupling has been correctly installed.

6. Fix the axial piston unit at the installation location.
7. Align the drive shaft of the axial piston unit and the output shaft of the drive motor so that there is no angular deviation.
8. Make certain that no impermissible axial and radial forces act on the drive shaft.
9. For bell housing installation, check the coupling axial play through the bell window according to the manufacturer's specifications.
10. Details on the required tools and tightening torques for the mounting bolts are available from the machine/system manufacturer.
11. When using flexible couplings, check that the drive is free of resonance after completing the installation.

#### 7.4.5 Installation on a gearbox

The installation layout for the axial piston unit on a gearbox is described below. After installing on a gearbox, the axial piston unit is covered and is difficult to access:

- ▶ Therefore, before installing, make sure that the spigot diameter centers the axial piston unit (observe tolerances) and that no impermissible axial or radial forces act on the drive shaft of the axial piston unit (installation length).
- ▶ Protect the drive shaft against frictional corrosion by providing permanent lubrication.
- ▶ Fix the axial piston unit at the installation location.

#### **For attachment via gear wheel or helically-toothed shaft**

No gearing forces higher than the permissible axial and radial forces are to act on the shaft, if necessary the gear wheel must be supported separately at the gearbox output.



#### 7.4.6 Installation with cardan shaft

How to connect the axial piston unit via a cardan shaft on a drive motor is described in detail in the following.

**NOTICE!** Damage to the axial piston unit and leaks at the shaft seal!

Improperly installed cardan shafts generate unbalances. This results in vibrations and impermissible forces on the drive shaft.

► Observe the cardan shaft manufacturer's assembly instructions.

1. Position the axial piston unit close to the specified installation location. It should allow enough space for the cardan shaft to fit through on both sides.
2. Position the cardan shaft on the output shaft of the drive motor.
3. Push the axial piston unit to the cardan shaft and position the cardan shaft on the drive shaft of the axial piston unit.
4. Bring the axial piston unit to the installation position and secure. If necessary, details on the required tools and tightening torque for the mounting bolts can be obtained from the system manufacturer.

#### 7.4.7 Completing installation

1. Remove any mounted transport screws.


**CAUTION!** Operation with protective plugs!

Operating the axial piston unit with protective plugs may result in injury or damage to the axial piston unit.

► Before commissioning, remove all protective plugs and replace them with suitable, pressure-proof, metal threaded plugs or connect the appropriate lines.

2. Remove the transport protection.

The axial piston unit is delivered with protective covers (**1**) and protective plugs (**2**). They are not pressure-resistant and have to be removed prior to connection. Use a suitable tool for this to prevent damage to the sealing and functional surfaces. If sealing or functional surfaces are damaged, contact your Bosch Rexroth service partner or the service department of the manufacturer's plant for the axial piston unit.

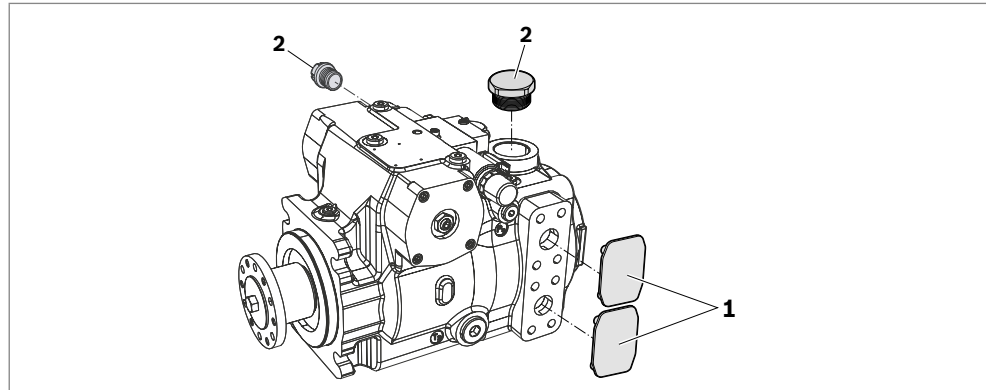

**Fig. 11: Removing transport protection**

- 1 Protective covers
- 2 Protective plugs/threaded plugs



Ports intended for connecting lines are provided with protective plugs or threaded plugs, which serve as transport protection. All ports required for functional operation must be connected (see Table 10 “Ports A10VGT Series 11” on page 37). Failure to do so could lead to malfunctions or damage. If a port is not connected, it must be plugged with a threaded plug because protective plugs are not pressure-resistant.




Setting screws are protected against unauthorized resetting by means of tamper-proof caps. Removal of the tamper-proof caps will void the warranty. If you need to change settings, contact your Bosch Rexroth service partner (for address, see Chapter 10.5 “Spare parts” on page 48).

#### 7.4.8 Changing the lever position of the HW control

If necessary, you can change the position of the lever by turning.

**Required tools** • Hexagon socket wrench with WAF 10 mm

- Procedure**
1. Loosen and remove the mounting bolt (1) of the HW lever (2).
  2. Pull the HW lever up, turn it into the desired position and push it back down.
  3. Tighten the mounting bolt (1) again.  
Tightening torque  $M_A = 6.5 \text{ Nm}$ .

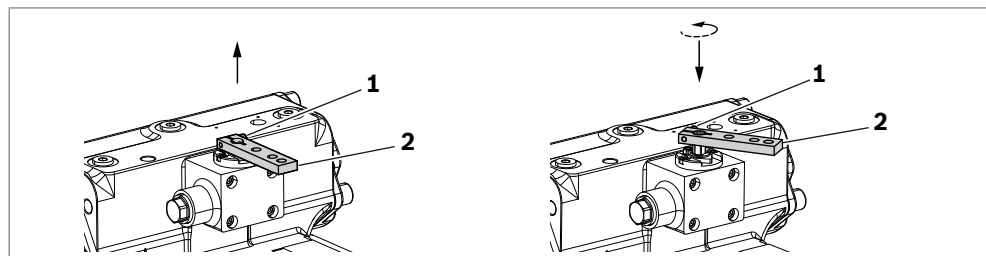

**Fig. 12: Changing the lever position of the HW control**

### 7.4.9 Hydraulically connecting the axial piston unit

## NOTICE

### Insufficient suction pressure!

Generally, a minimum permissible suction pressure at port “S” is specified for axial piston pumps in all installation positions. If the pressure at port S drops below the specified values, damage may occur which may lead to the axial piston pump being damaged beyond repair!

- ▶ Make sure that the necessary suction pressure is not undercut. This is influenced by:
  - the piping (e.g. suction cross-section, pipe diameter, length of suction line)
  - the position of the reservoir
  - the viscosity of the hydraulic fluid
  - a filter element or check valve in the suction line, if these are fitted (regularly check the level of soiling of the filter cartridge)

The machine/system manufacturer is responsible for dimensioning the lines. The axial piston unit must be connected to the rest of the hydraulic system in accordance with the hydraulic circuit diagram of the machine/system manufacturer. The ports and fastening threads are designed for the maximum permissible pressures  $p_{max}$ , see Table 10: Ports A10VGT Series 11. The machine/system manufacturer must ensure that the connecting elements and lines correspond to the specified application conditions (pressure, flow, hydraulic fluid, temperature) with the necessary safety factors.



Connect only hydraulic lines that are appropriate for the axial piston unit port (pressure level, size, system of units).

### Notes on routing lines

- Observe the following notes when routing the suction, pressure, and drain lines.
- Lines and hoses must be installed without pre-charge pressure, so that no further mechanical forces are applied during operation that will reduce the service life of the axial piston unit and, if applicable, the entire machine/system.
  - Use suitable seals as sealing material.
  - Suction line (pipe or hose)
    - The suction line should be as short and straight as possible.
    - Measure the line cross section of the suction line so that the pressure at the suction port does not drop below the minimum permissible pressure. Make sure that the maximum suction pressure is not exceeded (e.g. when pre-filling).
    - Make sure the connections and connecting elements are airtight.
    - The hose must be pressure-resistant, also for external air pressure.
  - Pressure line
    - For the pressure lines, use only pipes, hoses and connecting elements rated for the working pressure range specified in data sheet 92770 (see Table 10).
  - Drain line
    - Always route the drain lines so that the housing is constantly filled with hydraulic fluid and to ensure that no air gets through the shaft seal even during extended standstill periods.

- Under no operating circumstances may the case pressure exceed the maximum limit values specified for the axial piston unit in the data sheet.
- The drain line inflow in the reservoir must always be below the minimum fluid level (see Chapter 7.3 “Installation position” on page 28).
- If the axial piston unit is equipped with installed screw fittings, these must not be unscrewed. Screw the stud end of the fitting directly into the installed fitting.

**Risk of confusion with threaded connections**

Axial piston units are employed in application areas that use the metric measuring system as well as the Anglo-American (imperial) and the Japanese measuring system (JIS – **J**apan **I**ndustrial **S**tandard). Moreover, various kinds of seal are used.

The system of units, the kind of seal and the size of female thread and stud ends (e.g., threaded plug) must all match.

The limited ways of telling them apart visually poses a risk of confusing them.

**WARNING!** Leaky or bursting stud ends!

For fittings, if a stud end which is of a different measurement system, kind of seal and size with respect to the female thread is pressurized, the stud end may loosen itself or even be ejected from the hole in a projectile-like manner. This can result in serious injury and property damage. Hydraulic fluid can escape from this leakage point.

- ▶ Use the drawings (installation drawing) to determine the required stud end for each fitting.
- ▶ Make sure the right fittings, mounting bolts and threaded plugs are installed.
- ▶ For all female threads, use a stud end from the same system of units and of the correct size.

## Port overview

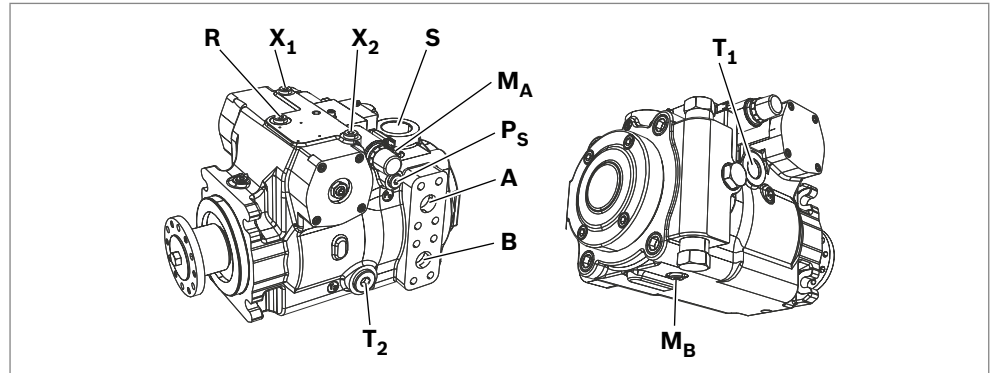


Fig. 13: Port overview A10VGT Series 11

Table 10: Ports A10VGT Series 11

Ports <sup>1)</sup>		$p_{\max}$ [bar] <sup>2)</sup>	State
<b>A, B</b>	Working port	420	O
<b>S</b>	Suction port	5	O
<b>T<sub>1</sub></b>	Drain port	3	O <sup>3)</sup>
<b>T<sub>2</sub></b>	Drain port	3	X <sup>3)</sup>
<b>R</b>	Air bleed port	3	X
<b>X<sub>1</sub>, X<sub>2</sub></b>	Control pressure port (upstream of orifice)	40	X
<b>P<sub>s</sub></b>	Pilot pressure port	40	X
<b>M<sub>A</sub>, M<sub>B</sub></b>	Measuring port pressure A, B	420	X

<sup>1)</sup> The measuring system and thread size can be taken from the installation drawing.

<sup>2)</sup> Depending on the application, short-term pressure peaks can occur. Keep this in mind when selecting measuring devices and fittings.

<sup>3)</sup> Depending on the installation position, T<sub>1</sub> or T<sub>2</sub> must be connected (see chapter 7.3 "Installation position" on page 28)

O = Must be connected (plugged on delivery)

X = Plugged (in normal operation)

- Tightening torques** The following tightening torques apply:
- Fittings:  
Observe the manufacturer's specifications regarding the tightening torques of the used fittings.
  - Female threads in the axial piston unit:  
The maximum permissible tightening torques  $M_{G \max}$  are maximum values of the female threads and must not be exceeded. For values, see Table 11.
  - Threaded plugs:  
For the metallic threaded plugs supplied with the axial piston unit, the required tightening torques of threaded plugs  $M_V$  apply. For values, see Table 11.
  - Mounting bolts:  
For mounting bolts with metric ISO thread according to DIN 13 or thread according to ASME B1.1, we recommend checking the tightening torque in individual cases in accordance with VDI 2230.

**Table 11: Tightening torques for female threads and threaded plugs**

Ports		Maximum permissible tightening torque of the female threads $M_{G \max}$	Required tightening torque of the threaded plugs $M_V$	WAF hexagon socket of the threaded plug
Standard	Thread size			
DIN 3852	M8 × 1	10 Nm	7 Nm <sup>1)</sup>	3 mm
	M10 × 1	30 Nm	15 Nm <sup>2)</sup>	5 mm
	M12 × 1.5	50 Nm	25 Nm <sup>2)</sup>	6 mm
	M14 × 1.5	80 Nm	35 Nm <sup>1)</sup>	6 mm
	M16 × 1.5	100 Nm	50 Nm <sup>1)</sup>	8 mm
	M18 × 1.5	140 Nm	60 Nm <sup>1)</sup>	8 mm
	M22 × 1.5	210 Nm	80 Nm <sup>1)</sup>	10 mm
	M26 × 1.5	230 Nm	120 Nm <sup>1)</sup>	12 mm
	M27 × 2	330 Nm	135 Nm <sup>1)</sup>	12 mm
	M33 × 2	540 Nm	225 Nm <sup>1)</sup>	17 mm
	M42 × 2	720 Nm	360 Nm <sup>1)</sup>	22 mm
	M48 × 2	900 Nm	400 Nm <sup>1)</sup>	24 mm
ISO 11926	5/16-24 UNF-2B	10 Nm	7 Nm	1/8 in
	3/8-24 UNF-2B	20 Nm	10 Nm	5/32 in
	7/16-20 UNF-2B	40 Nm	18 Nm	3/16 in
	9/16-18 UNF-2B	80 Nm	35 Nm	1/4 in
	3/4-16 UNF-2B	160 Nm	70 Nm	5/16 in
	7/8-14 UNF-2B	240 Nm	110 Nm	3/8 in
	1 1/16-12 UN-2B	360 Nm	170 Nm	9/16 in
	1 5/16-12 UN-2B	540 Nm	270 Nm	5/8 in
	1 5/8-12 UN-2B	960 Nm	320 Nm	3/4 in
	1 7/8-12 UN-2B	1200 Nm	390 Nm	3/4 in

<sup>1)</sup> The tightening torques for the threaded plugs are valid for the condition “dry” and “lightly oiled”.

<sup>2)</sup> The tightening torques for the threaded plugs are valid for the condition “dry”. In the “lightly oiled” state, the tightening torque is reduced to 10 Nm for M10 × 1 and 17 Nm for M12 × 1.5.

- Procedure** To connect the axial piston unit to the hydraulic system:
1. Remove the protective plugs or threaded plugs at the ports at which the connections are to be made according to the hydraulic circuit diagram.
  2. Make sure that the sealing surfaces of the hydraulic ports and functional surfaces are not damaged.
  3. Use only clean hydraulic lines or flush them before installation. (Observe Chapter 7.5 “Performing flushing cycle” on page 40 when you flush out the entire system.)
  4. Connect the lines in accordance with the installation drawing and the machine or system schematic. Check whether all ports are connected or plugged with threaded plugs.
  5. Tighten the fittings correctly (note tightening torques). Mark all correctly tightened fittings, e.g., with a permanent marker.
  6. Check all pipes and hose lines and every combination of connecting pieces, couplings or connecting points with hoses or pipes to ensure they are in condition for safe working.



For relationship between direction of rotation and flow direction, see data sheet 92770.

#### 7.4.10 Electrically connecting the axial piston unit

### **NOTICE**

#### **Short circuit in event of penetrating hydraulic fluid!**

Fluid can penetrate the product and cause a short circuit!

- ▶ Do not install axial piston units with electric components (e.g. electric controls, sensors) in a reservoir below the fluid level (inside-reservoir installation).


The machine/system manufacturer is responsible for the layout of the electric control. Electrically controlled axial piston units must be connected in accordance with the electrical circuit diagram for the machine/system.

For axial piston units with electrical control and/or mounted sensors, please comply with the details given in data sheet 92770, e.g.:

- Permissible voltage range
- Permissible current
- Correct pin assignment
- Recommended electrical control units

Exact details on the connector, type of protection and matching mating connector can also be found in data sheet 92770. The mating connector is not included in the scope of delivery.

1. Switch off power supply to the relevant system component.
2. Electrically connect the axial piston unit (12 or 24 V). Before connecting, check that the connector, including all seals, is intact.

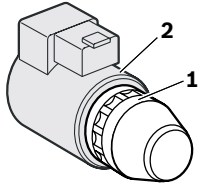**Changing connector position**

If necessary, you can change the position of the connector by turning the solenoid. This is not dependent on the connector version.

To do this, proceed as follows:

1. Loosen the mounting nut with rubber boot (**1**) on the solenoid. To do this, turn the mounting nut (**1**) one turn counter-clockwise.
2. Turn the solenoid body (**2**) to the desired position.
3. Re-tighten the mounting nut. Tightening torque of the mounting nut:  $5^{+1}$  Nm.

**7.5 Performing flushing cycle**

In order to remove foreign particles from the system, Bosch Rexroth recommends a flushing cycle for the entire system before the initial commissioning. To avoid internal contamination, the axial piston unit must not be included in the flushing cycle.



The flushing cycle must be performed with an additional flushing unit. Follow the instructions of the flushing unit's manufacturer for the exact procedure during the flushing cycle.



## 8 Commissioning

### **WARNING**

#### **Danger while working in the danger zone of a machine/system!**

Danger to life or risk of injury or serious injury!

- ▶ Pay attention to and eliminate potential danger sources before operating the axial piston unit.
- ▶ Make sure no one is in the danger zone of the machine/system.
- ▶ The emergency stop button for the machine/system must be within the operator's reach.
- ▶ Always follow the instructions of the machine/system manufacturer during commissioning.

### **CAUTION**

#### **Commissioning an improperly installed product!**

Risk of injury and property damage!

- ▶ Make sure that all electrical and hydraulic ports are connected or plugged.
- ▶ Only commission a completely installed, fully functioning product with original accessories from Bosch Rexroth.

### 8.1 Initial commissioning



During all work for commissioning the axial piston unit, observe the general safety instructions and intended use detailed in chapter 2 "Safety instructions" on page 8.

- ▶ Connect the pressure gauge for the boost pressure, working pressure, case pressure and suction pressure to the specified measuring points on the axial piston unit or in the hydraulic system, to check the technical data at first operation.
- ▶ During the commissioning process, monitor the temperature of the hydraulic fluid in the reservoir to ensure that it lies within the permissible viscosity limits.

#### 8.1.1 Filling the axial piston unit

Professional filling and air bleeding is necessary to prevent damage to the axial piston unit and to maintain correct function.



The axial piston unit should be filled with a filling unit (10 µm filter grade). The axial piston unit must not be operated while it is being filled by the filling unit.

Use only a hydraulic fluid that conforms to the following requirements:

You can find details of the minimum requirements on hydraulic fluids in Bosch Rexroth data sheets 90220, 90221 and 90222. The titles of the data sheet can be found in Table 1 “Required and supplementary documentation” on page 5.

You can find details of permissible and optimal viscosity in data sheet 92770.

To ensure the functional reliability of the axial piston unit, cleanliness level 20/18/15 according to at least ISO 4406 is necessary for the hydraulic fluid. At very high hydraulic fluid temperatures (+90 °C to maximum +110 °C, measured at port **T**), at least a cleanliness level of 19/17/14 according to ISO 4406 is necessary.

For permissible temperatures, see data sheet 92770.

1. Place a collecting pan under the axial piston unit to collect any hydraulic fluid that may leak.

**NOTICE!** Contaminated hydraulic fluid!

The cleanliness levels of hydraulic fluids on delivery do not normally conform to the requirements for our components.

- ▶ Use a suitable filter system to filter hydraulic fluids during filling to minimize solid impurities and water in the hydraulic system.

2. Fill and air bleed the axial piston unit via the appropriate ports, see Chapter 7.3 “Installation position” on page 28. The hydraulic lines of the system must also be filled.

**NOTICE!** Risk of property damage due to inadequate lubrication!

Product can get damaged or destroyed!

- ▶ When using a shut-off valve in the suction and/or drain line, make sure that the drive of the axial piston unit can only be started when the shut-off valves are open.
3. When using a shut-off valve in the suction and/or drain line, only operate the axial piston unit when the shut-off valves are open.
  4. Test the direction of rotation of the drive motor. To do this, rotate the drive motor briefly at the lowest rotational speed (inching). Make sure that the direction of rotation of the axial piston unit agrees with the details of the name plate, see chapter 5.3 “Product identification”, Fig. 3: Name plate A10VGT on page 21.
  5. Operate the axial piston pump at a lower rotational speed (starter speed for internal combustion engines or inching operation for electric motors) until the hydraulic system is completely filled and bled. To inspect, drain the hydraulic fluid at the drain port and wait until it drains without bubbles.

### 8.1.2 Testing the hydraulic fluid supply

The axial piston unit must always have a sufficient supply of hydraulic fluid.

For this reason, the supply of hydraulic fluid must be ensured at the start of the commissioning process.

When you test the hydraulic fluid supply, constantly monitor the noise development and check the hydraulic fluid level in the reservoir. If the axial piston unit becomes louder (cavitation) or the drain fluid is discharged with bubbles, this is an indication that the axial piston unit is not being sufficiently supplied with hydraulic fluid.

For information on troubleshooting, see chapter 14 “Troubleshooting” on page 52.

To test the hydraulic fluid supply:

1. Allow the drive motor to run at the lowest rotational speed. The axial piston unit must be operated without load. Pay attention to leaks and noises.
2. Check the axial piston unit’s drain line during the test. The drain fluid should be without bubbles.
3. Increase the load and check whether the working pressure rises as expected.
4. Perform a leak test to ensure that the hydraulic system is sealed and can withstand the maximum pressure.
5. Check the suction pressure at port **S** of the axial piston pump at nominal speed and maximum swivel angle. Refer to data sheet 92770 for the permissible value.
6. At maximum working pressure, check the case pressure at port **T<sub>1</sub>** or **T<sub>2</sub>**. Refer to data sheet 92770 for the permissible value.

### 8.1.3 Performing functional test

## **WARNING**

#### **Improperly connected axial piston unit!**

Mixing up the ports will cause malfunctions (e.g., lift instead of lower) and could endanger persons and equipment!

- ▶ Before the functional test, check whether the piping specified in the hydraulic circuit diagram has been installed.

Once you have tested the hydraulic fluid supply, you must perform a functional test on the machine/system. The functional test should be performed according to the instructions of the machine/system manufacturer.

The axial piston unit is tested for functional capability and performance before delivery according to the technical data. During commissioning, it must be ensured that the axial piston unit was installed properly in the machine/system.

- ▶ After starting the drive motor, check in particular the specified pressures, e.g., working pressure, boost pressure, and case pressure.
- ▶ Perform a leak test without and with load prior to normal operation.
- ▶ If necessary, disconnect the pressure gauge and plug the ports with the designated threaded plugs.

## 8.2 Running-in phase

### **NOTICE**

#### **Property damage by insufficient viscosity!**

An increased hydraulic fluid temperature may reduce the viscosity values by too much and damage the product.

- ▶ Monitor the operating temperature during the running-in phase, e.g., by measuring the leakage temperature.
- ▶ Reduce the loading (pressure, rotational speed) of the axial piston unit if impermissible operating temperatures and/or viscosities occur.
- ▶ Operating temperatures that are too high indicate faults that have to be analyzed and cleared.

The bearings and sliding surfaces are subject to a running-in phase. The increased friction at the start of the running-in phase results in increased heat development which decreases with increasing operating hours. The volumetric and mechanical-hydraulic efficiency increases as well through the conclusion of the running-in phase of approx. 10 operating hours.

To ensure that contamination in the hydraulic system does not damage the axial piston unit, Bosch Rexroth recommends the following procedure after the running-in phase:

- ▶ After the running-in phase, have a hydraulic fluid sample analyzed for the required cleanliness level.
- ▶ Change the hydraulic fluid if the required cleanliness level is not reached.  
If a laboratory test is not carried out after the running-in phase, it is recommended to change the hydraulic fluid.

## 8.3 Recommissioning after a standstill

Depending on the installation conditions and ambient conditions, changes may occur in the hydraulic system which make recommissioning necessary.

Among others, the following criteria may make recommissioning necessary:

- Air and/or water in the hydraulic system
  - Old hydraulic fluid
  - Other contamination
- ▶ Before recommissioning, proceed as described in Chapter 8.1 “Initial commissioning” on page 41.

## 9 Operation

The product is a component which requires no settings or changes during operation. For this reason, this chapter of the manual does not contain any information on adjustment options. Use the product only within the performance range specified in the technical data. The machine/system manufacturer is responsible for the proper project planning of the hydraulic system and its control.

### 9.1 Manual override of the electrical control

#### **NOTICE**

##### **Danger from improper handling!**

Proportional solenoid can be damaged!

- ▶ Do not actuate the manual override with a sharp tool.

The valves of the electrical control (EP) are equipped with a manual override. Where necessary or in the event of a fault (e.g. electrical fault), the adjustment of the axial piston unit can be changed manual via manual override.


The manual override is only designed for brief manual actuation; it must not be moved to a specific switch position by means of mechanical equipment for either a longer period of time or permanently.

The manual override device is not suitable for frequently recurring manual actuation!

- ▶ Press the left or right rubber foot on the electrical control (EP) until the desired adjustment position is reached.



After the emergency actuation is released, the control returns to its neutral position.

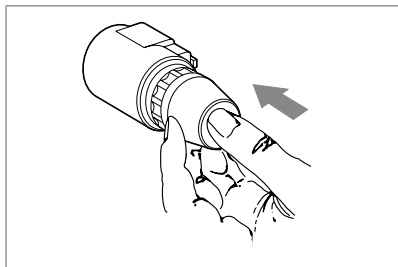

**Fig. 14: Manual override for electrical control**

## 10 Maintenance and repair

### **NOTICE**

#### **Inspection and maintenance work overdue!**

Risk of property damage!

- ▶ Perform the specified inspection and maintenance work at the intervals described in this manual.

### **10.1 Cleaning and care**

### **NOTICE**

#### **Damage to seals and electrical system due to mechanical forces!**

The jet of a high-pressure cleaner may damage the seals and electrical system of the axial piston unit!

- ▶ Do not point a high-pressure cleaner at sensitive components, e.g., shaft seal, electrical connections and components.

For cleaning and care of the axial piston unit, observe the following:

- ▶ Check whether all seals and fittings on the plug-in connections are securely seated to ensure that no moisture can penetrate into the axial piston unit during cleaning.
- ▶ Use only water and, if necessary, a mild cleaning agent to clean the axial piston unit. Never use solvents or corrosive cleaning agents.
- ▶ Remove major external contamination and keep sensitive and important components, such as solenoids, valves, displays and sensors, clean.

## 10.2 Inspection

In order for the axial piston unit to be reliable and long-lasting, Bosch Rexroth recommends testing the hydraulic system and axial piston unit on a regular basis, and documenting and archiving the following operating conditions:

**Table 12: Inspection schedule**

Task to be performed		Interval
Hydraulic system	Check level of hydraulic fluid in the reservoir.	Daily
	Check the operating temperature under comparable load condition at the drain port and in the reservoir.	Weekly
	Conduct analysis of hydraulic fluid: Viscosity, aging and contamination	Yearly or every 2000 operating hours (whichever occurs first)
	Check filter. The replacement interval may vary depending on the degree of contamination of the hydraulic fluid. We recommend using a contamination indicator.	Yearly or every 1000 operating hours (whichever occurs first)
Axial piston unit	Check axial piston unit for leakage. Early detection of hydraulic fluid loss can help to find faults on the machine/system and to rectify them. For this reason, Bosch Rexroth recommends that the axial piston unit and system are always kept in a clean condition.	Daily
	Check axial piston unit for unusual noise development.	Daily
	Check fastening elements for tight seating. All fasteners have to be checked when the hydraulic system is switched off, depressurized and cooled down.	Monthly

## 10.3 Maintenance

The axial piston unit is low-maintenance when used properly.

The service life of the axial piston unit is heavily dependent on the quality of the hydraulic fluid. For this reason, we recommend changing the hydraulic fluid at least once per year or every 2000 operating hours (whichever occurs first) or having it analyzed by the hydraulic fluid manufacturer or a laboratory to determine its suitability for further use.

The service life of the axial piston unit is limited by the service life of the bearings used. On the basis of the load cycle, you can ask the responsible Bosch Rexroth service partner about the service life, see Chapter 10.5 "Spare parts" on page 48 for an address. Based on these details, a maintenance interval is to be determined by the system manufacturer for the replacement of the bearings and included in the maintenance schedule of the hydraulic system.

## 10.4 Repair

Bosch Rexroth offers a comprehensive range of services for the repair of Rexroth axial piston units.

Repairs on the axial piston unit and its fittings may only be performed by service centers certified by Bosch Rexroth.

- ▶ Use exclusively original spare parts from Rexroth to repair the Rexroth axial piston units, otherwise the functional reliability of the axial piston unit cannot be assured and the warranty is void.

Should you have questions regarding repairs, contact your responsible Bosch Rexroth service partner or the service department of the manufacturer's plant for the axial piston unit, see Chapter 10.5 "Spare parts" on page 48.

## 10.5 Spare parts

### CAUTION

#### **Use of unsuitable spare parts!**

Spare parts which do not comply with the technical requirements as laid down by Bosch Rexroth can cause injury and property damage!

- ▶ Use exclusively original spare parts from Rexroth to repair the Rexroth axial piston units, otherwise the functional reliability of the axial piston unit cannot be assured and the warranty is void.

The spare parts lists for axial piston units are order-specific. When ordering spare parts, quote the material and serial number of the axial piston unit as well as the material numbers of the spare parts.

Address all questions regarding spare parts to your responsible Bosch Rexroth Service partner or the service department of the manufacturer's plant for the axial piston unit.

Details for the manufacturer's plant can be found on the name plate of the axial piston unit.

Bosch Rexroth AG  
Glockeraustrasse 4  
89275 Elchingen, Germany  
Hotline: +49 9352 405060  
spares.elchingen@boschrexroth.de

Spare parts can be found online at [www.boschrexroth.com/spc](http://www.boschrexroth.com/spc)

If you have general questions, please contact [svm.support@boschrexroth.de](mailto:svm.support@boschrexroth.de)

For addresses in our sales and service network, please refer to [www.boschrexroth.com/addresses](http://www.boschrexroth.com/addresses)



# 11 Removal and replacement

## 11.1 Required tools

Removal can be performed using standard tools. No special tools are necessary.

## 11.2 Preparing for removal

1. Decommission the entire system as described in the instruction manual for the machine or system.
  - Relieve pressure in the hydraulic system according to the instructions of the machine or system manufacturer.
  - Make sure that the relevant system components are not under pressure or voltage.
2. Protect the complete system against being re-energized.

## 11.3 Performing removal

Proceed as follows to remove the axial piston unit:

1. Make sure you have the appropriate tools and wear personal protective equipment.
2. Allow the axial piston unit to cool down until it can be removed without danger.
3. For below-reservoir installation, before removing the axial piston unit from the complete system, seal the connection to the reservoir or drain the reservoir.
4. Place a collecting pan under the axial piston unit to collect any hydraulic fluid that may leak.
5. Loosen the lines and collect the escaping hydraulic fluid in the collecting pan.
6. Remove the axial piston unit. Use a suitable lifting device.
7. Completely drain the axial piston unit of hydraulic fluid.
8. Plug all openings.

## 11.4 Preparing the components for storage or further use

- ▶ Proceed as described in Chapter 6.2 “Storing the axial piston unit” on page 24.

## 12 Disposal

Careless disposal of the axial piston unit, the hydraulic fluid and the packaging material can result in environmental pollution.

Observe the following points when disposing of the axial piston unit:

1. Completely drain the axial piston unit of hydraulic fluid.
2. Dispose of the axial piston unit and packaging material in accordance with the national regulations in your country.
3. Dispose of the hydraulic fluid according to the national regulations in your country. Also observe the applicable safety data sheet for the hydraulic fluid.
4. Disassemble the axial piston unit into its individual parts and properly recycle these parts.
5. For example, separate the parts into:
  - Castings
  - Steel
  - Aluminum
  - Non-ferrous metal
  - Electronic waste
  - Plastic
  - Seals

## 13 Extension and conversion

Do not modify the axial piston unit or its attachments.

Changes to settings on the customer side should only be made using the product-specific setting instructions.



The warranty by Bosch Rexroth only applies to the product as delivered. The warranty is void if the unit is modified or extended.



Setting screws are protected against unauthorized resetting by means of tamper-proof caps. Removal of the tamper-proof caps will void the warranty. If you need to change settings, contact your Bosch Rexroth service partner (for address, see Chapter 10.5 “Spare parts” on page 48).

# 14 Troubleshooting

Table 13 may help you when troubleshooting. This table is not exhaustive.

Issues may occur in practice that are not listed here.

Only authorized personnel may perform troubleshooting inside a safety area designated by the machine manufacturer.

## 14.1 How to proceed for troubleshooting

- ▶ Perform troubleshooting if possible with reduced operating data (e.g., slowly swinging in or out and slow pressure increase).
- ▶ Proceed in a systematic and purposeful manner, even when pressed for time. Random and imprudent removal and changing of settings could result in the inability to ascertain the original failure cause.
- ▶ First obtain a general overview of how your product works in conjunction with the entire system.
- ▶ Try to find out whether or not the product was working properly in conjunction with the entire system before the fault occurred.
- ▶ Try to determine any changes to the entire system in which the product is installed:
  - Were there any changes to the product's application conditions or operating range?
  - Has maintenance work recently been carried out? Is there an inspection or maintenance log?
  - Have any changes (e.g., upgrades) or repairs been made to the overall system (machine/system, electrics, control) or to the product? If yes, which?
  - Has the hydraulic fluid been changed?
  - Has the product or machine been used as intended?
  - How did the malfunction appear?
- ▶ Try to get a clear idea of the cause of the fault. Directly ask the (machine) operator.
- ▶ Document the work carried out.
- ▶ If you cannot rectify the fault, contact one of the contact addresses which can be found at: [www.boschrexroth.com/addresses](http://www.boschrexroth.com/addresses).

## 14.2 Malfunction table

**Table 13: Axial piston unit malfunction table**

<b>Fault</b>	<b>Possible cause</b>	<b>Remedy</b>
Unusual noises	Insufficient air bleeding of the hydraulic system	Fill axial piston unit, suction line for the hydraulic pump and the reservoir
		Completely air bleed axial piston unit and hydraulic system
		Check correct installation position
	Insufficient suction conditions, e.g. insufficient dimensioning of the suction line, viscosity of the hydraulic fluid too high, suction height too high, suction pressure too low, contaminants in the suction line, suction filter too small, etc.	Machine/system manufacturer: Check the system, e.g. optimize inlet conditions, use suitable hydraulic fluid
		Fill the suction line with hydraulic fluid
		Remove foreign particles from the suction line
		Check the filter system and change the filter as necessary
Drive speed too high	Machine/system manufacturer: reduce drive speed	
Wrong direction of rotation	Machine/system manufacturer: check correct direction of rotation, see chapter 7.4.1 "Preparation" on page 30	
Improper mounting of the axial piston unit	Check the mounting of the axial piston unit according to the specifications of the machine/system manufacturer (observe tightening torques)	
Improper mounting of attachments, hydraulic lines or improper installation of the coupling	Mount attachments according to the information provided by the coupling or fitting manufacturer	
Pressure-relief valves of the axial piston unit swing (boost-pressure relief valve, high-pressure relief valve).	Air bleed axial piston unit and hydraulic system	Contact Bosch Rexroth Service: Optimize the setting of the pressure relief valves
		Replace axial piston unit
Mechanical damage to the axial piston unit (e.g., bearing damage)	Contact Bosch Rexroth Service	Contact Bosch Rexroth Service
		Contact Bosch Rexroth Service
Increased, unusual vibration	Bearings worn	Contact Bosch Rexroth Service

**Table 13: Axial piston unit malfunction table**

<b>Fault</b>	<b>Possible cause</b>	<b>Remedy</b>	
No or insufficient flow	Insufficient air bleeding of the hydraulic system	Fill axial piston unit, suction line for the hydraulic pump and the reservoir	
		Completely air bleed axial piston unit and hydraulic system	
	Faulty mechanical drive (e.g. defective coupling)	Contact machine/system manufacturer	
	Drive speed too low	Contact machine/system manufacturer	
	Insufficient suction conditions, e.g. insufficient dimensioning of the suction line, viscosity of the hydraulic fluid too high, suction height too high, suction pressure too low, contaminants in the suction line, suction filter too small, etc.	Machine/system manufacturer: Check the system, e.g. optimize inlet conditions, use suitable hydraulic fluid	Fill the suction line with hydraulic fluid
			Remove foreign particles from the suction line
			Check the filter system and change the filter as necessary
	Hydraulic fluid not in optimum viscosity range	Machine/system manufacturer: check temperature range and use suitable hydraulic fluid	
	Insufficient boost pressure	Check boost pressure	Contact Bosch Rexroth Service
	Insufficient pilot pressure or control pressure	Check pilot pressure or control pressure	Contact Bosch Rexroth Service
	Malfunction of the control device or controller of the axial piston unit	Contact Bosch Rexroth Service	
Control of the control device defective	Check control (contact machine/system manufacturer or Bosch Rexroth Service)		
Wear or mechanical damage to the axial piston unit	Replace axial piston unit	Contact Bosch Rexroth Service	

**Table 13: Axial piston unit malfunction table**

<b>Fault</b>	<b>Possible cause</b>	<b>Remedy</b>
No or insufficient pressure	Insufficient air bleeding of the hydraulic system	Fill axial piston unit, suction line for the hydraulic pump and the reservoir
		Completely air bleed axial piston unit and hydraulic system
		Check correct installation position
	Faulty mechanical drive (e.g. defective coupling)	Contact machine/system manufacturer
	Drive power too low	Contact machine/system manufacturer
	Insufficient suction conditions, e.g. insufficient dimensioning of the suction line, viscosity of the hydraulic fluid too high, suction height too high, suction pressure too low, contaminants in the suction line, suction filter too small, etc.	Machine/system manufacturer: Check the system, e.g. optimize inlet conditions, use suitable hydraulic fluid
		Fill the suction line with hydraulic fluid
		Remove foreign particles from the suction line
		Check the filter system and change the filter as necessary
	Hydraulic fluid not in optimum viscosity range	Machine/system manufacturer: check temperature range and use suitable hydraulic fluid
Insufficient boost pressure		Check boost pressure
		Contact Bosch Rexroth Service
Insufficient pilot pressure or control pressure		Check pilot pressure or control pressure
		Contact Bosch Rexroth Service
Malfunction of the control device or controller of the axial piston unit		Contact Bosch Rexroth Service
Control of the control device defective		Check control (contact machine/system manufacturer or Bosch Rexroth Service)
Wear or mechanical damage to the axial piston unit		Replace axial piston unit
		Contact Bosch Rexroth Service
Output unit defective (e.g. hydraulic motor or cylinder)		Contact machine/system manufacturer

**Table 13: Axial piston unit malfunction table**

<b>Fault</b>	<b>Possible cause</b>	<b>Remedy</b>
Pressure/flow fluctuations/ instabilities	Insufficient air bleeding of the hydraulic system	Fill axial piston unit, suction line for the hydraulic pump and the reservoir
		Completely air bleed axial piston unit and hydraulic system
		Check correct installation position
	Insufficient suction conditions, e.g. insufficient dimensioning of the suction line, viscosity of the hydraulic fluid too high, suction height too high, suction pressure too low, contaminants in the suction line, suction filter too small, etc.	Machine/system manufacturer: Check the system, e.g. optimize inlet conditions, use suitable hydraulic fluid
		Fill the suction line with hydraulic fluid
		Remove foreign particles from the suction line
Excessive temperature of hydraulic fluid and case	Pressure-relief valves of the axial piston unit swing (boost-pressure relief valve, high-pressure relief valve).	Air bleed axial piston unit and hydraulic system Contact Bosch Rexroth Service
	Unstable control signal	Contact machine/system manufacturer or Bosch Rexroth Service
	Malfunction in the control devices or the controller	Contact Bosch Rexroth Service
	Excessive inlet temperature at the axial piston unit.	Machine/system manufacturer: inspect system, e.g., malfunction in the cooler, insufficient hydraulic fluid in the reservoir
Incorrect setting or malfunction of the pressure relief valves (high-pressure relief valve)		Optimize the adjustment of the axial piston unit pressure relief valves and the pressure limitation in the hydraulic system Contact Bosch Rexroth Service
Contact machine/system manufacturer		
	Axial piston unit worn	Replace axial piston unit, contact Bosch Rexroth Service



## 15 Technical data

The permissible technical data values for your axial piston unit can be found on the data sheet 92770.

The data sheet can be found on the Internet at  
[www.boschrexroth.com/mediadirectory](http://www.boschrexroth.com/mediadirectory)

Additional information can be found in the online product catalog  
Mobile Hydraulics: [www.boschrexroth.com/axial-piston-pumps](http://www.boschrexroth.com/axial-piston-pumps)

Order-related technical data for your axial piston unit can be found in the order confirmation.

## 16 Alphabetical index

▶ <b>A</b>		▶ <b>I</b>	
Abbreviations	7	Identification	21
Above-reservoir installation	29	Inspection	47
▶ <b>B</b>		Installation	26, 30
Below-reservoir installation	28	– completing	33
Boost pump	19, 20	– general instructions	31
▶ <b>C</b>		– on a gearbox	32
Care	46	– on gearbox	32
Circuit		– Preparation	30
– closed	19	– with cardan shaft	33
Cleaning	46	– with coupling	31
Commissioning	41	Installation conditions	26
– initial	41	Installation position	
Connecting		– Above-reservoir installation	29
– electrical	39	– Below-reservoir installation	28
– hydraulic	35	Instructions	
Control	20	– general	31
Conversion	51	Intended use	8
Corrosion protection	24	▶ <b>L</b>	
Corrosion protection film	24	Layout	19
Cradle	19	Lifting device	22
Cylinder	19	Lifting strap	23
▶ <b>D</b>		▶ <b>M</b>	
Designations	7	Maintenance	46, 47
Dimensions	22, 30	Malfunction table	53
Direction of rotation	30	▶ <b>N</b>	
Disposal	50	Name plate	21
Distributor plate	19	▶ <b>O</b>	
Drive shaft	19	Operation	45
▶ <b>E</b>		▶ <b>P</b>	
Eye bolt	22, 23	Performance description	19
▶ <b>F</b>		Piston	19
Filling	41	Port overview	37
Flushing cycle	40	Pressure side	19
Functional description		Product description	19
– Control	20	Property damage	15
Functional test	43	▶ <b>Q</b>	
		Qualifications	9

<b>► R</b>	
Recommissioning	
– after standstill	44
Removal	49
– performing	49
– preparing	49
Repair	48
Replacement	49
Required documentation	5
Retaining plate	19
Running-in phase	44
<b>► S</b>	
Safety instructions	8
– General	10
– Product-specific	11
– Signal word	6
Scope of delivery	18
Slipper pad	19
Solenoid position	
– changing	40
Spare parts	48
Storage	22
Storage time	24
Storing	24
Stroking piston	19
Suction side	19
Symbols	7
<b>► T</b>	
Technical data	57
Tightening torques	38
Tools	49
Transportation	22
– by hand	22
– with eye bolt	22, 23
– with lifting strap	23
Transporting	22
Transport protection	34
Troubleshooting	52
<b>► U</b>	
Unpacking	26
<b>► W</b>	
Warranty	17, 34, 51
Weight	22

**Bosch Rexroth AG**

Mobile Applications  
Glockeraustraße 4  
89275 Elchingen  
Germany  
Tel. +49 7308 82-0  
info.ma@boschrexroth.de  
www.boschrexroth.com

**Your local contact person can be found at:**

[www.boschrexroth.com/addresses](http://www.boschrexroth.com/addresses)